II. Letter selection

1 Connecting a keyboard and entering characters

Characters can be entered from a keyboard to the sewing machine. Note that there are some keys which can only be operated from the sewing machine operating panel.


A. Connecting a keyboard

1. Keyboard selector


Set the keyboard selector (1) to the keyboard (A or B) used.

(For German, Finnish, Norwegian, and Swedish)



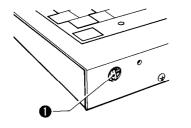



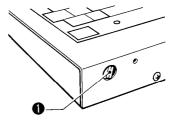




Keyboard A

Keyboard B



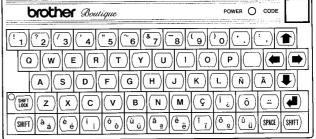

2. Connecting the keyboard to the machine

Turn the power switch on the sewing machine off.

Note: Do not turn the power off until the indicator on the floppy disk drive goes out. See the figures below.

