
Singer 95-80 Singer 95-100

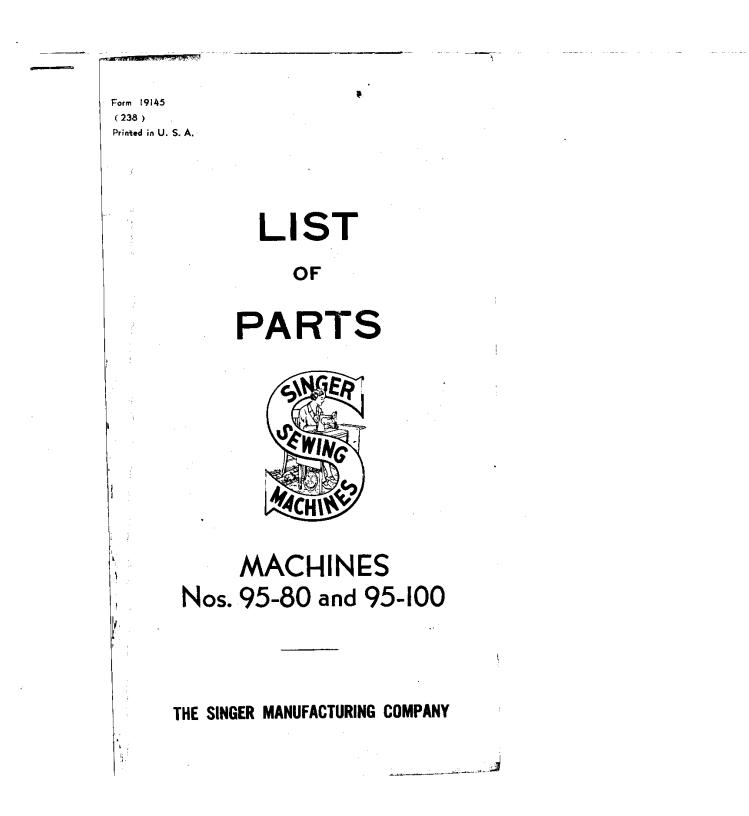

INSTRUCTIONS FOR OILING

TT IN

Real Property of the

Use only Singer "Oil For High Speed Sewing Machines (Cloth and Leather)" for general use, or "Stainless Oil For High Speed Sewing Machines" where a stainless oil is desired.

Oil should be applied to all oil holes and bearings of the machine at least four times a day. Keep all wicking saturated with oil.

The upper and lower gears of the upright arm shaft should be greased with Singer Gear Lubricant every 160 hours of operation, using an Alemite-Zerk grease gun as instructed in Form 19067.

> Copyright, U. S. A., 1921, 1922, 1933, 1935, 1937 and 1938 by The Singer Manufacturing Co. All Rights Reserved for all Countries

Ассеввотіев	Page 15
Binder on Shank	15
Binder (Transverse) on Shank	15
Bobbin Winders	16
Finger Guards	19
Fittings for Dress Shirts	19
Foot Lifter Parts	. 21
Hemmers (Foot)	22
Hemmers on Shank	23
Knee Lifter Parts	25
Machine Base	27
Machine No. 95-80	5
Machine No. 95-100	13
Numerical List of Parts	33
Piping Attachment	27
Presser Feet	27
Ruffler	28
Thread Unwinder	29
Tuckers (Long Arm)	29

INDEX

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine. The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed B-Polished, Nickel Plated and Buffed

C-Hardened Only

D-Polished Only E-Soft, Not Polished

F-Hardened and Polished

F.J-Hardened, Polished and Nickel Plated G-Bright Rumbled and Nickel Plated

H-Blued

J-Nickel Plated Only

K-Hardened and Nickel Plated

L-Brass Plated M-Oxidized

N-Japanned, Dull

p_Japanned, Bright

R-Merlized

S-Cadmium Plating

T-Copper Plated

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed

T.B-Copper and Nickel Plated and Polished

T.J-Copper and Nickel Plated Only T.K-Hardened, Copper and Nickel Plated

T.L-Copper and Brass Plated

T.M-Copper Plated and Oxidized

U-Zinc Plated

V-Silver Plated

W-Polished and Nickel Plated

X-Black Oxide, for Iron and Steel X.C-Hardened and Black Oxide, for Iron or Steel

Y-Black Nickel Plated Only

Z-Chromium Plated

Z.A-Hardened, Polished, Nickel Plated, Buffed and Chromium Plated

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated

Z.C-Hardened and Chromium Plated Z.J-Nickel and Chromium Plated

These letters MUST BE USED when they appear in the list; and

AFTER the number as in the list. In this series:

1 to 1500, 50001 to 51500 and 140001 to 142000


are Screw Numbers 1501 to 1800 and 51501 to 51800 are Nut Numbers

1801 to 2000 and 51801 to 52000 are Roller Numbers 2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward

are numbers of Electrical Parts. The figures in the second column refer only to the plates,

illustrating the parts, and are NOT TO BE USED in ordering. Parts marked with an asterisk (*) are furnished only when repairs are made at factory.



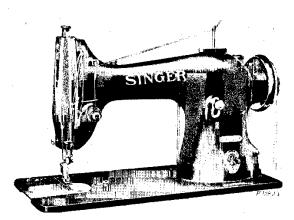

MACHINE No. 95-80

For Light and Medium Weight Fabrics. Maximum stitch seven to the inch. Drop feed. The machine is fitted with heavy gear shafts and three plain bearings for the arm shaft. The gears are lubricated with grease instead of oil. The grease is applied with Alemite Zerk hand pressure gun. Needle bar stroke | 9/64 inches. Speed up to 4200 R. P. M., according to the material being stitched.

No.	Plate	Name
+52252		Arm with 15404 and two each 15405 and
		56015
No	ote: Due	to the accuracy required for gear align-
· ·	ment,	Arm cannot be supplied separately and can
	only b	e sent out as a unit, Arm and Bed assem-
	bled.	·
16532	21836	Arm Dowel Pin
52182	21836	" 011 Tube with 52184, for 011ing 127231
52183	21836	" " " 52184, for oiling 52024
		and 127156, for 127193 and 150460
52180	21836	Arm Oil Tube (long) with 52184, for oil-
		ing 52022

The second

÷

No.	Plate		Name
52185	21836	Arm	011 Tube (short) with 42367, for oil-
			ing 52022
127187	21836	Arm	Oil Tube with 42367, for oiling 127152
			for 127193 and 150460
56015	21836	Arm	0il Tube for oiling 142006
52254	21836	×	" " 52262
52184	21836	n	Packing (wick) for 52180,
			52182 and 52183
42367	21836	Arm	Oil Tube Packing (braided cotton) for
			52185 and 127187
52290	21836	Arm	011 Tube Hole Plug
116E	21836		Screw (back)
868E	21836		" (front)
52255	21838	#	Shaft (horizontal)
52256		R	52255 with 52196 and
			52246
68350	22218	Arm	Shaft (horizontal) Back Bearing Oil
			Cup
127072	21837	Arm	Shaft (horizontal) Bevel Gear with
			two 1036C
142003	21837	Arm	Shaft (horizontal) Bevel Gear Case
		,	(two pieces) with 51068R, 140184E and
			142005
142005	21836	Arm	Shaft (horizontal) Bevel Gear Case
			Alemite Fitting
140184E	21836	Arm	Shaft (horizontal) Bevel Gear Case
			Plug Screw
51068R	22218	Arm	Shaft (horizontal) Bevel Gear Case
			Screw
10360	22218	Arm	Shaft (horizontal) Bevel Gear Set
			Screw
•52259		Arm	Shaft (horizontal) Flanged Bushing
-00000			(back)
52260	21837	A 1700	Shaft (horizontal) Flanged Bushing
			(back) 52259 with 52193 and 52289
52193	22218	Arm	Shaft (horizontal) Flanged Bushing
			(back) 011 Pad, inside (braided cot-
			ton)
52289	22218		Shaft (horizontal) Flanged Bushing
			(back) Oil Pad, outside (felt)
448C	22218	"Arm	Shaft (horizontal) Flanged Bushing
			(back) Set Screw
*52195		Arm	Shaft (horizontal) Flanged Bushing
			(front)
52196	21837	Arm	Shaft (horizontal) Flanged Bushing
			(front) 52195 with 52193 and 52198
52193	22218	Arm	Shaft (horizontal) Flanged Bushing
			(front) 011 Pad, inside (braided cot-
			ton)

PARTS FOR MACHINE No. 95-80

.

7

.

1

No.	Plate		Name
52198	22218	A 7700	Shaft (horizontal) Flanged Bushing
05190	22210	AIM	(front) Oil Pad, outside (felt)
435C	22218	Arm	Shaft (horizontal) Flanged Bushing
1000			(front) Set Screw
68350	22218	Arm	Shaft (horizontal) Front Bearing 011
			Cup
+52261		Arm	Shaft (horizontal) Intermediate Bush-
			ing
52262	21837	Arm	Shaft (horizontal) Intermediate Bush-
			ing 52261 with 52193 and 52263
52193	22218	Arm	Shaft (horizontal) Intermediate Bush-
50047	00010		ing Oil Pad, inside (braided cotton).
52263	22218	AIN	Shaft (horizontal) Intermediate Bush- ing Oil Pad, outside (felt)
423C	22218	Å 7900	Shaft (horizontal) Intermediate Bush-
-	22210	AT 10	ing Set Screw
144D	22218	Arm	Shaft (horizontal) Screw
142006	21837		" (upright)
52281	22218		" " Bevel Gear (lower) with
			two 12590
1259C	22218	Arm	Shaft (upright) Bevel Gear (lower)
			Set Screw
52282	22218	Arm	Shaft (upright) Bevel Gear (upper)
1259C	22218	A	with two 1259C Shaft (upright) Bevel Gear (upper)
12090	22210	ATH	Set Screw
* 52275		AIT	Shaft (upright) Bushing (lower)
52276	21837	7	" " " S2275
	•		with 52279 and 52280
432C	22218	Arm	Shaft (upright) Bushing (lower) Set
			Screw
+52277		AITH	Shaft (upright) Bushing (upper)
52278	21837	N	* * 52277
4477	00010		with 52279 and 52280
443C	22218	Arm	Shaft (upright) Bushing (upper) Set
52280	22218	A 7700	Screw
000000	00010	A1 14	side (felt)
52279	22218	Arm	Shaft (upright) Bushing Oil Wick, in-
			side (braided cotton)
127146	21806	Arm	Side Cap
219 J	22218	*	* * Screw
127079	21837		Cover
5005 3	22218		* * Thumb Screw
52239	22218		Spool Pin and Thread Eyelet
8879	5936	-	* * Washer (cloth)
127192 127193	21837 21837		Top Cover
101190	\$100Y		" 127192 with 52183, 52239, 127187 and 127255
127255	22218	A 1770	Top Cover Positioning Disc
201000	~~~~	97T 10	tob contra Longerounde Dioc

6

.

. **4**.

.

¢

в

PARTS FOR MACHINE No. 95-80

No.	Plate	Name
158J	22218	Arm Top Cover Screw
52176	22226	Balance Wheel (power, disc) 2-3/16 in.
		pulley, with two 448C
448C	22218	Balance Wheel Set Screw
*52283		Bed
No		to the accuracy required for gear align-
		Bed cannot be supplied separately and can
		be sent out as a unit, Arm and Bed assem-
	bled.	
12431		Bed Slide
4307	22220	" Spring
725J		SULAM
12432	21806	Bed Slide complete, Nos. 4307, 12431 and
		two 725J
52051	22226	Face Plate
176J	22220	" Screw
52053	22220	Thread Guard (lower)
226J 52170	22220 22220	SCIEW
52170 226J	22220	(upper)
52052		" " " " Screw
02002		Face Plate complete, Nos. 52051, 52053, 52170 and two 226J
5019 0	22220	Face Plate Thumb Screw
52452	21837	
3130	22220	Feed Bar
56813		" " 313C with 1519J
1519J	22220	" " " Nut
52165	22220	" Connecting Link
3750	-22220	" " " Hinge Screw
1518 J	22220	" " " " Nut
52073	22220	" " " Stud
5008 3C	22220	" " " " Set Screw
52031	21839	" Dog,19 teeth (22 teeth to the inch)
		for 52032 and 52033
50117E	22220	Feed Dog Screw
52218	21837	* and Feed Lifting Eccentric with 448C
		1299C, 52210 and 52211
52231		Feed and Feed Lifting Eccentric 52218
		with 127152
52210	22220	Feed and Feed Lifting Eccentric Lubricat-
		ing Pad (long) wood
52211	22220	Feed and Feed Lifting Eccentric Lubricat-
		1ng Pad (short) wood
12990	22220	Feed and Feed Lifting Eccentric Position
4400	00010	Screw
448C	22218	Feed and Feed Lifting Eccentric Set Screw
127152 24037	21837 21838	Dieeve
24037 52085	21808	Forked Connection.
06000		" 24037 w1th 375C, 1518J and 52165
		10100 and 06100

PARTS FOR MACHINE No. 95-80

No.	Plate	Name
3750	22220	Feed Forked Connection Hinge Screw
1518 J	22220	" " " Nut
52065	21838	* Lifting Rock Shaft
52264		Feed Lifting Rock Shaft complete, Nos. 52065 and 52265
127156	21838	Feed Lifting Rock Shaft Connecting Rod with two 966E
966E	22220	Feed Lifting Rock Shaft Connecting Rod Cap Screw
3750	22220	Feed Lifting Rock Shaft Connecting Rod
		Hinge Screw
1518J	22220	Feed Lifting Rock Shaft Connecting Rod
- 50073		Hinge Screw Nut
+52271		Feed Lifting Rock Shaft Crank
52265	21837	" " " " 52271 with 157J and 52267
157J	22220	Feed Lifting Rock Shaft Crank Clamping
		Screw
52266		Feed Lifting Rock Shaft Crank Slide Block
52267	22220	****
		52266 with 125060
*125060		Feed Lifting Rock Shaft Crank Slide Block
		Stud
50191C	22220	Feed Lifting Rock Shaft Screw Center
52097		" " " " 50191C
		with 1513J
1513J	5885	Feed Lifting Rock Shaft Screw Center Nut.
52074	21837	" Regulator with 50083C
52118	'	52074 with 52073
52093		52118 with 818D
1128E	21840	Hinge Screw
818D	21840	Thumo Screw
52068	21838	Rock Shaft
52069		Feed Rock Shaft complete, Nos. 29633 and 52068
29633	21840	Feed Rock Shaft Crank with 157J
157J	22220	" " Clamping Screw
50191C	22220	" " Screw Center
52097		" " " 50191C with
		151 3J
1513 J	5885	Feed Rock Shaft Screw Center Nut
25878	21841	Guide
50190W	22220	* Thumb Screw
52155	21841	Needle Bar (hollow) with 857H
52268	21840	Bushing (lower)
1133E	21840	" " Set Screw
52014	21841	* * (upper)
1133E	21840	" " Set Screw
127231	21840	" Connecting Link with 52207

No.	Plate	Name
127232		Needle Bar Connecting Link 127231 with
775E	21840	24041 Needle Bar Connecting Link Cap Screw
52207	21840	" " " Lubricating Pad (wood)
24041	21840	Needle Bar Connecting Stud with 207E
207E	2834	" " Clamping Screw
52246	21841	" " Crank with 1036C, 1037C and
		1065C
1065C	21840	Needle Bar Crank Position Screw
857H	21840	* Set Screw
127133	21841	011 Tube with 52045
127091	21841	" Bracket
52167	21841	12/091 WIGH 12/100, 101
,		oiling 52165
52045	21836	Oil Tube Packing (wick)
12391	21841	Presser Bar (hollow) " " Guide Bracket with 223C and
52338	5936	
453C	5936	453C Presser Bar Guide Bracket Set Screw
4530 52016	5936 5936	" " Lifter
6890	5936	" " " Hinge Screw
1520J	5936	" " " " Nut
12327	5936	* Lifting and Releasing Lever
10007	0000	Bracket
127108	21841	Presser Bar Spring
11170	5936	" " " Washer
62527	21839	" Foot Hinge Pin
24544		* * Plate
24982		" * Shank
26231	21839	Spring
24983	21839	Presser Foot (spring hinged) complete,
		Nos. 24544, 24982, 26231 and 62527
176J	22220	Presser Foot Screw
688W	21840	Pressure Regulating Thumb Screw
127095	21840	Rotating Hook with three 1253C
127096		1053E
127239		Rotating Hook 127096 with 40274, 127242
-10/200		and three 1367E
127097		Rotating Hook 127096 with 40274 and three
		1367E (for Agents only)
127240		Rotating Hook 127239 with 52237
40264	21840	Bobbin
52235		" " Case
52236		'" " 52235 with 591F
		1380E and 40394
40392	21840	Rotating Hook Bobbin Case Latch
125320	21840	" " Lever
2974	22224	n n n n n Ful-
		crum Pin

PARTS FOR MACHINE No. 95-80

÷e

11

٦

Ser Prost

...

.

No.	Plate	Name
2975	21840	Rotating Hook Bobbin Case Latch Spring
592E	22224	" " " Stop Screw
40393		" Hinge, Nos.2974
		40392 and 125320
591F	22224	Rotating Hook Bobbin Case Tension Regu-
		lating Screw
40394 1380E	21840 22224	Rotating Hock Bobbin Case Tension Spring.
TOOL	4444	Screw
52237	22224	Rotating Hook Bobbin Case complete, Nos.
000007	00001	592E, 2975, 40393 and 52236
127241		Rotating Hook Bobbin Case 52237 with
		127242
127242	22224 -	
52018	22224	" " " Position
		Bracket
704J	22224	Rotating Hook Bobbin Case Holder Position
10051		Bracket Screw
40274	22224	Rotating Hook Section
1367E 1253C	22224 22224	" " Screw " Set Screw
142007	21838	* * Shaft
127073	22224	" " Bevel Gear with two
12/0/0	L.L.L.L.	12590
142004	21841	Rotating Hook Shaft Bevel Gear Case (two
		pieces) with 51068R, 140184E and
		142005
142005	21836	Rotating Hook Shaft Bevel Gear Case
		Alemite Fitting
140184E	21836	Rotating Hook Shaft Bevel Gear Case Plug
51068R	22218	Screw Rotating Hook Shaft Bevel Gear Case Screw
1259C	22218	Rotating Hook Shalt Bevel Gear Case Screw
+52285		" " Bushing (back)
52286	21841	" " " " " 52285
		with 52279 and 52280
11480	22224	Rotating Hook Shaft Bushing (back) Set
		Screw
+52287		Rotating Hook Shaft Bushing (front)
52288	21841	" " " 52287
140000	00004	with 52279 and 52280
142008	22224	Rotating Hook Shaft Bushing (front) 011
1148C	22224	Cup Rotating Hook Shaft Bushing (front) Set
11100		Screw
52280	22218	Rotating Hook Shaft Bushing 011 Pad, out-
		side (felt)
52279	22218	Rotating Hook Shaft Bushing Oil Wick, in-
		side (braided cotton)
127102	22224	Rotating Hook Thread Guard
1053E	22224	" " Screw

10

No.	Plate	Name
52337	5936	Slack Thread Regulator
2230	5936	" " Set Screw
2102	3471	Tension Disc
15600	22224	" Regulating Thumb Nut
32572	21842	" Releasing Disc
43944	5936	" " Lever
12398	5936	" Hinge Pin
12329	5936	" " Spring
32574	21842	" " Pin
13710	21842	" Spring
50304C	21842	" Stud
52098		" " 50304C with 1560C
50305C	22224	" * Set Screw
52092		Tension complete, Nos. 13710, 32572,32574
,		52082, 52083, 52098 and two 2102
52171	21842	Thread Evelet, for 52268
52027	21842	" Guard (side of arm)
52454	22224	" Retainer
624C	22224	" " Set Screw
52269		Thread Take-up complete, Nos. 11204,52025
00000		and 52270
52216	22224	Thread Take-up Crank
52270		* * 52216 with 775E and
0.000		127232
10370	21842	Thread Take-up Crank Position Screw
1036C	22218	" " Set Screw
52022	21842	Lever with 52130
52023	21842	" " Hinge Pin
52024	21842	" " Link
11204	21842	" " " Hinge Pin
4350	22218	n n n n n Set
		Screw
52130	21842	Thread Take-up Lever Thread Eyelet Bush-
		ing
52025		Thread Take-up Lever complete, Nos. 52022
		to 52024
52082	21842	Thread Take-up Spring
52083	21842	" " Regulator with 50305C
448C	22218	" " Set Screw.
52032	21853	Throat Plate, large needle hole, for 52031
52033	21839	small needle hole, for 52031
Ň	ote: Th	roat Plate No. 52033 is sent with this ma-
	chine	unless otherwise specified on order.
691 F	21839	Throat Plate Screw
*15404		Trade Mark
15405		Rivet
24079	5877	Drip Pan

MACHINE No. 95-100

17.7

For Light and Medium Weight Fabrics. Maximum stitch seven to the inch. Drop feed. The machine is fitted with heavy gear shafts; a plain bushed intermediate bearing, also front and rear ball bearings for the arm shaft. The gears are lubricated with grease instead of oil. The grease is applied with Alemite Zerk hand pressure gun. Needle bar stroke I 9/64 inches. Speed up to 4200 R. P. M., according to the material being stitched.

NOTE: THIS MACHINE IS THE SAME AS THE 95-80 MACHINE WITH THE FOLLOWING EXCEPTIONS:

No.	Plate	Name
+52253		Arm with 15404 and two each 15405 and
		56015, in place of 52252
N	ote: Du	e to the accuracy required for gear align-
	ment,	Arm cannot be supplied separately and can
	only	be sent out as a unit, Arm and Bed assem-
	bled.	
52257	21838	Arm Shaft (horizontal) with 127067, in
		place of 52255
52258		Arm Shaft (horizontal) 52257 with 52214,
		in place of 52256
54897	21842	Arm Shaft (horizontal) Back Bearing 011
		Cup, in place of 68350
52146	21.642	Arm Shaft (horizontal) Back Bearing Oil
		Cup Pad (braided cotton)
127011	21841	Arm Shaft (horizontal) Ball Bearing
-100140		(back) in place of 52260
+127143		Arm Shaft (horizontal) Ball Bearing
127144	01.040	(back) Cover
167144	21841	Arm Shaft (horizontal) Ball Bearing
*127145		(back) Cover 127143 with 127145
412/140		Arm Shaft (horizontal) Ball Bearing
219.7	22218	(back) Cover 011 Lead
2130	ere 10	Arm Shaft (horizontal) Ball Bearing
52486	21842	(back) Cover Screw
00400	01040	Arm Shaft (horizontal) Ball Bearing
		(back) Locking Pin

12

1

13

78577 +

.

MAGE:

14

No.	Plate	Name
52487	21842	Arm Shaft (horizontal) Ball Bearing
		(back) Locking Pin Cone
446C	21842	Arm Shaft (horizontal) Ball Bearing
		(back) Locking Pin Cone Screw
127066	21841	Arm Shaft (horizontal) Ball Bearing
		(front) in place of 52196
127009	21841	Arm Shaft (horizontal) Ball Bearing
		(front) Cover
401E	21842	Arm Shaft (horizontal) Ball Bearing
		(front) Cover Screw
127067	21842	Arm Shaft (horizontal) Ball Bearing
		(front) Key
52240	21837	Arm Shaft (horizontal) Bevel Gear Case
		Holder, in place of 52259
54897	21842	Arm Shaft (horizontal) Front Bearing 011
		Cup, in place of 68350
52146	21842	Arm Shaft (horizontal) Front Bearing 011
		Pad (braided cotton)
52247	21841	Needle Bar Crank with 1036C, 1037C and
		1065C
52214		Needle Bar Crank 52247 with 401E and
		127009, in place of 52246

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked <u>"For Singer Machines"</u> are not Singer made needles.

ACCESSORIES

No.	Plate	Name
121587	21838	Grease Gun (3 oz. capacity) for Fitting No. 142005
121588		Grease Gun (1/2 lb. capacity) for Fitting No. 142005
20022	21843	Machine Cushion (felt)
27878	21843	" " Rivet
12361	21843	" Hinge Connection
44139	21843	* " Plate
44140		Machine Hinge complete, Nos. 12361, 44139
		and merlized wood screw 1-1/4 in. No.
		14
41400	22226	Machine Rest Pin (wood)
120342	21835	0iler (copper plated) with 120343
120343	21835	Spout, 3-1/2 in. long
26026	21835	Screw Driver (large)
264 85	21835	" " (small)
8909	21835	Wrench for 1513 and 1518
8908	21835	" 1519 and 1520

BINDER ON SHANK

No.	Plate	Name
35208	1971	Binder on Shank, to turn in both edges,
		for bias or straight binding, for
		skirts, wrappers, shirt waists, etc
26603	21818	Feed Dog, 20 teeth (16 teeth to the inch)
		for 26605 and 26606
52055	2181 9	Presser Foot
26605	21818	Throat Plate, large needle hole, for 26603
26606		" " small needle hole, for 26603

BINDER (Transverse) ON SHANK

FOR 3/4 IN., 7/8 IN. and 1 IN. TAPE

FOR FOLDED OR UNFOLDED BIAS BINDING (With Tape Reel)

FOR GENERAL WORK

No.	Plate	Name
121167		Binder Folder on Shank
43525	21854	Steady Pin

BOBBIN WINDER

Name	No.	Plate	
Binder Thumb Screw	88 79	5936	Tension
" " Washer	2455	2834	M
Feed Dog, 18 teeth (16 teeth to the inch)	41593	5936	
for 121398	41594	5936	· #
Presser Foot	460C	21843	11
Tape Reel Arm with 8879, 11656 and 120537	41595	5936	
" " Steady Pin	60845		Bobbin
" " " Thumb Screw			415
" " Disc with 120538 and 120539	41915	21834	Bobbin
" " " Pin	150461		Bobbin
" " " Stud (wood)			han
" " " Sleeve	880E	21843	Bobbin
" " Washer (cloth)	25446	21843	п
Throat Plate with 43525, for 121397		~_~10	
Binder (transverse) on Shank complete,			

Nos. 3146, 120536, 121167, 121169, 121397, 121398, 121412 and two 51097J

BOBBIN WINDERS

ACCESSORIES

16

No.

3146

121397

121169

121412

11656

120536

120537

120538

120539

8879

121398

121168

51097J

51097J 21843

Plate

21843

21818

21819

21819

21819

21843

22226

5936

21818

BOBBIN WINDER

(SWINGING AUTOMATIC, LEFT HAND)

No.	Plate	Name
41913	21834	Bracket with 4570
41583	21834	Frame with 4570
34105	21834	" Hinge Pin
457C	21843	" " Set Screw
41914	21834	" Spring
41585	21834	Pulley with 171J
171 J	21843	" Set Screw
41586	21834	Spindle
41587	21834	Stop Latch
42614	21843	" " Hinge Stud
457C	21843	" " " Set Screw
7958	21843	" " Stop_Pin
41588	21834	" " Tripping Arm with 185H
185H	21843	" " " Clamping Screw
150459	21834	Tension Bracket with 460C
150460		Tension Bracket complete, Nos. 41593 to
		41595, 52183, 52239, 127187, 127255,
		150459 and two 2455
127255	22218	Tension Bracket Positioning Plate
158J	22218	* * Screw
52239	22218	" " Spool Pin and Thread Eye-
000000	PPPPT()	let
		100

No.	Plate	Name
8879	5936	Tension Bracket Spool Pin Washer (cloth).
2455	2834	" Disc
41593	5936	Spring
41594	5936	* Stud
460C	21843	" Set Screw
41595	5936	" Thread Guide
60845		Bobbin Winder, Nos. 7958, 34105, 41583,
		41585 to 41588, 41913,41914 and 42614
41915	21834	Bobbin Winder 60845 with 880E and 25446.
50461		Bobbin Winder (swinging automatic, left
		hand) complete, Nos. 41915 and 150460
880E	21843	Bobbin Winder Screw
25446	21843	" " Washer

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

No.	Plate	Name
41339	2833	Base
4134 0	2833	Frame
1429D	2834	" Hinge Screw
41341	2833	" Spring
207J	2834	" Screw
41342	2833	Pulley with 200F
200F	2834	" Set Screw
41343	2834	Spindle
27306	2834	Spool Pin
27307	2833	" Stand
27308	2833	Spool Stand complete, Nos. 418E, 1562J,
		2106, 10141, 11241, 27306, 27307 and
		two each 2455 and wood screws 1 in.
		No. 10
11241	2833	Spool Washer (cloth)
41344	2834	Stop Latch
4134 5	2834	* * Finger
152F	2834	* * * Screw
1430D	2834	# " Hinge Screw
1550H	2834	* " " Nut
41346	2834	* • Lever
1430D	2834	" " Hinge Screw
2455	2834	Tension Disc
1562J	2834	" Regulating Thumb Nut
418E	2834	" Screw Stud
10141	2834	" Spring
2106	2834	" Thread Guide
60456		Bobbin Winder, Nos. 152F, 207J, 1429D,
		1550H, 41339 to 41346 and three 1430D

17

4.1

18 BOBBIN WINDER

a.æ.

No.	Plate	Name
41347	2833	Bobbin Winder, Nos. 60456 and two each 9331 and wood screws 1 in. No. 10 R.H
41348		Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 41347.
9331	2834	Bobbin Winder Washer

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR POWER TABLE

No.	Plate	Name
225433	3469	Bobbin Winder and Tension Bracket Base
225453	3470	Frame with 202277 and 225438
225454	3471	" Hinge Pin
202277	3471	" Oil Packing (wick)
225438	3471	" " Well Cap
225455	3471	" Spring
225456	3471	Plunger
202473	3470	Pulley with 200380C
2003800	3471	" Set Screw
225381	3470	Spindle
225444	3471	Stop Latch
200056E	3471	" * Screw
225458	3471	" " Thumb Lever
225459	3471	" " Hinge Stud
225459	3471	* * * * Joint Stud
202478	3471	Trip Lever
200299H	3471	" " " Hinge Screw
225461	3471	Tension Bracket with 201499B
200082D	3471	" Screw
228026		" " Washer
2102	3471	" Disc
202407	3471	" Spring
201499B	3471	• Stud
201572B	3471	" " Thumb Nut
225462		Tension Bracket complete, Nos. 201572B,
		202407, 225461 and two 2102
225382	3469	Bobbin Winder complete, Nos. 200056E,
		200082D, 200299H, 202473, 202478,
		225381, 225433, 225444, 225453 to
		225456, 225458, 225462, 228026, two
		each 225459 and wood screws 3/4 in.
		No. 12 R.H

FINGER GUARDS

No.	Plate	Name
121326	21844	Finger Guard
36819	21844	" Friction Washer
36820	21844	" Holder with 196J
196J	21844	" " . " Set Screw
5C316J	21844	" " Screw
121327	21844	Finger Guard (metal) complete, Nos. 36819
		36820, 50316J and 121326
121507	21844	Finger Guard
120858	21844	Holder with 50302J
50302J	21844	" " Set Screw
236J	21844	" " Screw
121562	21844	Finger Guard (wire) complete, Nos. 120858 121507 and two 236J

FITTINGS FOR DRESS SHIRTS

FOR BUTTON STAYS

No.	Plate	Name
26603	21847	Feed Dog, 20 teeth (16 teeth to the inch)
		for 26605 and 26606
121653	21847 -	Hemmer on Shank for 9/16 in. hem
7298	21847	Presser Foot Hinge Pin
120143		" " Plate
19335		" " Shank
120144	21847	Presser Foot (hinged) complete, Nos.7298,
		19335 and 120143
26605	21847	Throat Plate (large needle hole) for
		26603
26606		Throat Plate (small needle hole) for
		26603

FOR COLLAR WORK

(FIRST STITCHING)

.

No.	Plate	Neme
20164	21845	Feed Dog, 16 teeth (16 teeth to the inch)
		for 1/8 in. stitch (1/64 in. higher)
		for 52190
52189	21845	Presser Foot (solid) for 52190
52190	21845	Throat Plate for 20164

20 FITTINGS FOR DRESS SHIRTS

BB 3.5

Υ.

FOR COLLAR WORK

(SECOND STITCHING)

No.	Plate	Name
121646	21848	Feed Dog, 12 teeth (16 teeth to the inch)
		for 121649
121647	21848	Presser Foot with 121648 and two 337J,for
-		3/16 in., 7/32 in., 9/32 in. and 5/16
		in. gauges
121648	21848	Presser Foot Edge Guide, for 3/16 in.,
		7/32 in., 1/4 in., 9/32 in. and 5/16
		in. gauges, for 121647
337J	21848	Presser Foot Edge Guide Screw
121649	21848	Throat Plate for 121646

FOR CUFF WORK

No.	Plate	Name
20164	21846	Feed Dog, 16 teeth (16 teeth to the inch)
		for 1/8 in. stitch (1/64 in. higher)
		for 52190
52188	21846	Presser Foot (solid) for 52190
52190	21846	Throat Plate for 20164

SLEEVE PLACKETS (Facing)

No.	Plate	Name
121655	21849	Binder on Shank
26603	21849	Feed Dog, 20 teeth (16 teeth to the inch)
		for 26605 and 26606
121656	21849	Presser Foot
26605	21849	Throat Plate (large needle hole) for
		26603
26606		Throat Plate (small needle hole) for
		26603

FOR SHOULDER JOINING

No.	Plate	Name
26603	21850	Feed Dog, 20 teeth (16 teeth to the inch)
20000		for 26605 and 26606
121662	21850	Joining Attachment for 121663
121663	21850	Presser Foot for 121662
26605	21850	Throat Plate (large needle hole) for 26603
26606		" (small needle hole) for 26603

FITTINGS FOR DRESS SHIRTS

संस्थलत र ।

FOR YOKING

No.	Plate	Name
121658	21851	Edge Folder with Edge Guide on Shank, for
26603	21851	121660 Feed Dog, 20 teeth (16 teeth to the inch) for 26605 and 26606
7298	21851	Presser Foot Hinge Pin
121659		* * Plate
19223		* * Shank
121660	21851	Presser Foot (hinged) complete for 121658 Nos. 7298, 19223 and 121659
26605	21851	Throat Plate (large needle hole) for 26603
26606	•	Throat Plate (small needle hole) for 26603

FOOT LIFTER PARTS

No.	Plate	Name
5596	22226	Bell Crank
56848		" 5596 with 5599 and 5601
5599	22226	" Bracket
178E	22230	** * Screw
5601	22230	Hinge Pin
5735	21844	" " Spring
5598	22226	Bell Crank complete, Nos. 5735 and 56848.
5670		Chain, length 26 in. to 35 in., with
	•	56864 and 56865
No	te: W	hen ordering No. 5670, state length required.
4879	21844	Chain Connecting Link
56864	21819	" Hook (large)
56865	21819	" (small)
16510	21838	Lifting Lever with 448C
52028	22226	" Connecting Rod
12416	5936	• • • • Joint
76D	22230	Hinge
		Screw
1521J	22230	Lifting Lever Connecting Rod Lock Nut
802D	22230	" " Hinge Screw
12241	5936	" Link
766D	22230	" " Hinge Screw
12240	22230	" " Pin
448C	22218	* * * Set Screw
2763	5876	Rock Shaft
12242	5876	" Hanger with two wood screws 1
		in. No. 10

21

्या स्टब्स् इन्द्रां स्टब्स्

PECSTON AND

,

11. A. P.

22

		·
No.	Plate	Name
6337	5876	Rock Shaft Lifting Bracket with two 356C.
12243	5876	Hook
7125	5876	* * * * Hook
3560	22230	" " " Set Screw
3560	22230	" * * Set Screw
2770	5876	Stop Dog with 356C
356C	22230	" Set Screw
4880	5876	Rock Shaft complete, Nos. 2763, 2770,7125
		12243 and two each 6337 and 12242
4881	5876	Treadle
4882	22230	" Shaft
4883	22230	* Spring
4884	5876	" Stand
4885	5876	Treadle complete, Nos. 4879, 4881 to 4884
		and two wood screws 1 in. No. 16
52029		Foot Lifter complete, Nos. 76D, 766D,802D
		1521J, 4880, 4885, 5598, 5670, 12240,
		12241, 12416, 16510, 52028 and two
		178E

FOOT LIFTER PARTS

HEMMERS (Foot)

No.	Plate	Name
120938	5921	Hemmer (foot) for 3/32 in, hem
120803	5919	" " 1/8 in. hem
120804	5919	" " 5/32 in. hem
120805	5919	" " 3/16 in. hem
36122		" " 7/32 in. hem
120806	5920	" " 1/4 in. hem
120807	5920	" " 5/16 in. hem
6267		" Folder for 36122
120939	5919	" " 120803 to 120807 and
		120938
+25888		Hemmer Tongue for 36122
*12083 8	5919	* 120804 and 120805
*120839	21844	" 120806 and 120807
#120843	5919	" " 120803 and 120938
No	ote: Wh	ien ordering Hemmer Folders or Hemmer
		es, state width of hem and No. of hemmer
		hich it is required.
35710		Hemmer (foot) 3/32 in. hem, with guide on
		bottom to the right of needle hole
35682	21817	Hemmer (foot) 1/8 in. hem, with guide on
a		bottom to the right of needle hole
36524		Hemmer (foot) 5/32 in. hem, with guide on
		bottom to the right of needle hole

HEMMERS (Foot)

No.	Plate	Name
35997		Hemmer (foot) 3/16 in. hem, with guide on
		bottom to the right of needle hole
36309		Hemmer (foot) 7/32 in. hem, with guide on
		bottom to the right of needle hole
36072		Hemmer (foot) 1/4 in. hem, with guide on
		bottom to the right of needle hole
120898	5921	Hemmer (foot) for 1/16 in, to 1/8 in. hem
		for China Silk, etc
120911	5921	Hemmer (foot) for 5/32 in. to 1/4 in. hem
		for China Silk, etc
36413		Hemmer (foot) plain bottom, 1/16 in. hem.
36414		" " " 3/32 in. hem.
36480	·	" " " 5/32 in. hem.
36416		" " " 3/16 in. hem.
120837	5920	" " " 1/8 in. hem,
		slotted for lace

HEMMERS ON SHANK

No.	Flate	Name
20163	5882	Feed Dog, for 1/16 in. stitch, 16 teeth
		(16 teeth to the inch) for 20123 and
		35540
35926		Hemmer
590J	21844	" Adjusting Screw
1443B	21844	" Screw
35927		* Shank
35540	5882	Hemmer on Shank complete, with right hand
		lower guide, for lace, Nos. 1443B,
		35926, 35927 and two 590J
62527	21839	Presser Foot Hinge Pin
40316		" " Plate
40317		" " Shank
40318	5882	Presser Foot (hinged) complete, for lace
		running, for 35540, Nos. 40316, 40317
		and 62527
20123	5882	Throat Plate for 20163 and 35540
26603	21818	Feed Dog, 20 teeth (16 teeth to the inch)
		for 26605, 26606 and 35236
35236	1971	Hemmer on Shank, for 7/16 in. hem
52055	21819	Presser Foot for 35236
26605	21818	Throat Plate, large needle hole, for
		26603
26606		Throat Plate, small needle hole, for
		26603

The state of the second se

*****....

÷

#

25

HEMMERS ON SHANK

No.	Plate	Name
26603	21852	Feed Dog, 20 teeth (16 teeth to the inch)
120991	21852	for 26605 and 26606 Hemmer on Shank, for 1/16 in. to 1/4 in.
28627	21852	gauges Hemmer on Shank, for 1/8 in. to 5/8 in. gauges, for 28628
28628	21852	Presser Foot, for 3/8 in. to 5/8 in. gauges, for 28627
26605	21852	Throat Plate (large needle hole) for 26603
26606		Throat Plate (small needle hole) for 26603

FOR HEMMING SHEETS

	No.	Plate	Name
	52031	21853	Feed Dog, 19 teeth (22 teeth to the inch)
			for 52032 and 52033
	1499J	21853	Hemmer Screw
	121672	21853	on Shank
	121673	21853	" Throw-out Arm with 35522
	35522	21853	" " " Pin
	121674	21853	Hemmer complete on Throw-out Arm, for 2
			in. or 3 in. hem, Nos. 121672, 121673
			and two 1499J
	No	te: W	hen ordering No. 121674, state width of hem.
	1499J	21853	Hemmer Screw
	121675	21853	on Shank
	121676	21853	" Throw-out Arm with 35522
	35522	21853	" " " Pin
	121677	21853	Hemmer complete on Throw-out Arm, for 1
			in. hem, Nos. 121675, 121676 and two
			1499J
	121678	21853	Hemmer Tension Spring
	121679		Hemmers complete, for 1 in. and 2 in. or
			3 in. hems, Nos. 24J, 39026, 121674,
ч			121677 and 121678
	No	te: Wi	nen ordering No. 121679, state width of hems
	24J	21853	Hemmers Hinge Screw
	39026	21853	" " Washer
	121680	21853	Presser Foot
	52032	21853	Throat Plate (large needle hole) for
			52031
	52033		Throat Plate (small needle hole) for
			52031

HEMMERS ON SHANK

FOR HEMMING PILLOW CASES

No.	Plate	Name
26603	+ +	
20000	\$100 4	Feed Dog, 20 teeth (16 teeth to the inch)
		for 26605 and 26606
121665	21854	Hemmer Scroll (lower) on Shank with 337B,
		36696 and 121667, for 121668
121667	21854	Hemmer Scroll (lower) Spring with 43525.
36696	21854	" Lock Pin
43525	21854	" " Position Pin
337B	21854	" " " " Screw
121666	21854	" (upper)
121668	21854	Hemmer on Shank complete, for 7/8 in. to
		2 in. hem, Nos. 121665 and 121666
121669	21854	Hemmer Scroll (lower) on Shank with 337B,
		36696 and 121667, for 121671
121667	21854	Hemmer Scroll (lower) Spring with 43525
36696	21854	Lock Pin
43525	21854	" " " Position Pin
337B	21854	" " " Screw
121670	21854	" " (upper)
121671	21854	Hemmer on Shank complete, for 2-1/16 in.
		to 4 in. hem, Nos. 121669 and 121670.
35063	21854	Presser Foot
26605	21854	Throat Plate (large needle hole) for
		26603
26606		Throat Plate (small needle hole) for
		26603

KNEE LIFTER PARTS

	·	
Nc.	Plate	Name
5596	22226	Bell Crank
56848		" 5596 with 5599 and 5601
5599	22226	" Bracket
178E	22230	" " Screw
5601	22230	" " Hinge Pin
5735	21844	" " Spring
5598	22226	Bell Crank complete, Nos. 5735 and 56848.
16510	21838	Lifting Lever with 448C
52028	22226	" Connecting Rod
12416	5936	" " Joint
76D	22230	" " Hinge
		Screw
1521J	22230	Lifting Lever Connecting Rod Lock Nut
802D	22230	" " Hinge Screw

*

24

EX.

ч

KNEE LIFTER PARTS

-

26

	No.	Plate	Name
	12241	5936	Lifting Lever Link
	766D	22230	Hinge Screw
	12240	22230	• Pin
	448C	22218	" " Set Screw
	2759	5877	" Rod with 2761
		21844	* * Cap (washer)
	2761		" Collar with 362C
•	2762	21844	* * Set Screw
	3620	21844	Lifting Rod complete, Nos. 2759 and 2762.
	2760		Rock Shaft
	2763	5877	Hanger with two wood screws 1
	12242	587 6	in. No. 10
	0005	E000	Rock Shaft Knee Arm for 2768
	2765	5877	* * * * 6336
	6335	5877	" " " Hub with 356C
	·2766	5877	" " " " Set Screw
	3560	22230	Rock Shaft Knee Arm complete for 2777,
	2768		Nos. 2765 to 2767
	077.0		Rock Shaft Knee Arm complete for 19168,
	6336		Nos. 2766, 2767 and 6335
	0000	F000	Rock Shaft Knee Plate with 356C
	2767	5877	* * * Set Screw
	356C	22230	Det below
	2769	5877	" Lifting Arm with 356C " " Set Screw
	356C	22230	" " Bracket with two 356C.
	6337	5877	π • • • • • • • • • • • • • • • • • • •
	2778	5877	" " " " " " Set Screw.
	3560	22230	" " " Set Screw
	356C	22230-	
	2770	5876	" Stop Dog with 356C
	3560	22230	" " " Set Screw
	2777	5877	Rock Shaft complete for 52030, Nos. 2763,
			2768, 2770, 2778, 6337 and two 12242.
	19168		Rock Shaft complete for 52036, Nos. 2760,
			2763, 2769, 6336 and two each 2770
			and 12242
	52030		Knee Lifter complete (power table) Nos.
			76D, 766D, 802D, 1521J, 2777, 5598,
			12240, 12241, 12416, 16510, 52028 and
			two 178E
	52038		Knee Lifter complete (bench stand) Nos.
			76D, 766D, 802D, 1521J, 5598, 12240,
			12241, 12416, 16510, 19168, 52028 and
			two_178E

MACHINE BASE

No.	Plate			Name
24106	21843	Bed	Frame	Cushion (felt)
158E	22218		n -	" Screw
24107	21843			Hinge Connection
9261	21843			" " P1n
970D	21843		1.11	Thumb Screw
24108	5876	Bed	9261,	complete, Nos. 970D, two each 24107, four each 158E, 24106 ix wood screws 1-1/4 in. No. 12.

PIPING ATTACHMENT

No.	Plate	Name
120977		Piping Attachment
1443J	21844	* Screw
35245	21817	Piping Attachment complete, for piping house dresses, Nos. 1443J and 120977.
44253	22228	Feed Dog, 16 teeth (16 teeth to the inch) for 44255 and 44256
52056	21817	Presser Foot
44256	22228	Throat Plate, large needle hole, for 44253
44255		Throat Plate, small needle hole, for 44253

PRESSER FEET

No.	Plate	Name
36464	21817	Presser Foot Spring Guide
665J	21817	" " Screw
364 65	21817	Presser Foot (right hand spring guide)
		with 665J and 36464, for 1/32 in. to
		5/16 in. gauges
No	te: When	ordering No. 36464 or No. 36465, state re-
	quired	distance from edge of goods to seam.
36574	22228	Presser Foot
36575		" 36574 with 36576 and two
		50202J
36576	22228	Presser Foot Finger Guard
50202J	22228	" " Screw
36714	'	" " with 233J
36715	21 817	" " Guide (right) with 36716
233J	21817	" " Set Screw

No

PRESSER FEET Plate Name

	. 10.00	
36716	21817	Presser Foot Guide Stud
36717	21817	Presser Foot complete with Adjustable
		Guide (right) Nos. 36714 and 36715
36773	21819	Presser Foot, for braiding
120828	21839	" " (single toe) for gathering,
		for fine work

RUFFLER

No.	Plate	Name
121116	22229	Driving Lever
51371K	21644	" Adjusting Thumb Screw (lower)
560B	21844	" " " (upper)
120812	22228	" " Bushing
120813	22228	" " Friction Washer
51219 F	21844	" " Hinge Screw
1700J	22228	" " " " Nut
121117	22229	Frame
36637	22228	* Spring Plate
36638	22228	Ribbon Guide.
240B	22228	" " Screw
121118	22228	Ruffling Blade
121119	22228	" " Holder
121120		" " !21119 with 121118
		and two 120829
36641	22228	Ruffling Blade Holder Guide
36642	22228	" " " Rivet
51221F	22228	" " Hinge Screw
1772J	22228	* " * * * Nut
121121	22229	" Lever with 560B and 51371K
120829	22228	" Rivet
36644	22228	Separating Blade
120830		" " Holder
121501		" " 120830 with 36644
		and two 120829
36646	22228	Separating Blade Holder Friction Spring
36647	22228	" " Hinge Stud
3664 8	22228	" " " Stop Stud
120829	22228	" " Rivet
36644	22228	Shirring Blade
120818		" " Holder
120819		" " 120818 with 36644
		and two 120829
120829	22228	Shirring Blade Rivet

RUFFLER

٠

29

No.	Plate	Name
121123	22229	Ruffler complete, Nos. 240B, 1700J, 1772J
		36637, 36638, 36641, 36642, 36646 to
		36648, 51219F, 51221F, 120812, 120813
		121116, 121117, 121120, 121121 and
		121501
121451		Ruffler 121123 with 1981, 51272C and
		120819
1981	21844	Ruffler Roller
51272C	21844	" " Stud and Needle Clamping
		Screw

THREAD UNWINDER

FOR TWO SPOOLS OR TWO LARGE CONES OF THREAD

No.	Plate	Name
225257	20335	Spool Rest with 201018C
150203	20335	" " Cushion (felt)
225388	20335	" Rod
2003830	22230	" " Set Screw
201018C	22230	" " Set Screw
202490	20335	" Stand with 200383C
225391	20335	Thread Guide
201696J	22230	" Lock Nut
225326	20335	" " Position Cup
225324	20335	" Rod with 208E and 225322
208E	22230	" " Screw
225322	22230	" " Washer
225258	20335	Thread Unwinder complete, Nos. 201696J,
		202490, 225257, 225324, 225326, 225388
		two each 150203, 225391 and three
		wood screws 7/8 in. No. 12 F.H.
27739	7234	Thread Cone (wood) for large cones
225390	7234	" " Holder, for inverted cones
INC		27739 and 225390 are used with, but not
	includ	ed in 225258.

TUCKERS (Long Arm)

No.	Plate	Name
36387	5884	Space Guide
35510	5884	" Base with 35512, 35514 and two
		1426E
402J	5885	Space Guide Base Screw
35511	5885	" " Indicator

10 C

TUCKERS (Long Arm)

31

No.	Plate	Name
36654	21839	Presser Foot for tucking shirt bosoms, for 36670
52032	21853	Throat Plate, large needle hole, for 52031
52033	21839	Throat Flate, small needle hole, for 52031
36670		Tucker (long arm) complete, for tango tucking, Nos. 36388, 36394, 36654 and two 4021

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked "For Singer Machines" are not Singer made needles.

No. Plate 🛰 Name 35512 5885 Space Guide Pin..... 5885 35513 Stop (left)..... . 8 35514 5885 Guide Pin.... 1426E 5885 Screw Stud..... 1657D 5885 Thumb Nut..... 17718 5885 " " Washer.. 35515 5885 (right) 1426E 5885 Screw Stud..... 1657D 5885 Thumb Nut..... 17718 5885 " Washer... 287J 5885 Thumb Screw..... Space Guide complete, Nos. 287J, 35510, 36388 ----35511, 35513, 35515, 36387 and two each 1657D and 17718..... Tuck Guide Arm..... 35517 5883 1177J 5885 Screw..... 35518 5883 Base 50134E 5885 77 Screw Stud 36389 5883 Bracket.... . Screw Center..... 3070 5885 56814 . " 307C with ----1513J..... 1513J 5885 Tuck Guide Bracket Screw Center Nut..... 36390 5885 . 6 Spring..... 36391 5884 Plate..... 9D 5885 Screw..... 423C 22218 Stop Screw..... 1520J 5936 . " Nut..... 36392 5883 . Frame 36393 5885 # Spring..... . 1510E 5885 Nut..... # 35524 5885 Washer..... 80**3C** 5885 Stop Screw..... 1520J 5936 * . * Nut..... . 35511 5885 Indicator..... 1 5883 35525 Plate.... Screw..... 1115F 5885 36394 Tuck Guide complete, Nos. 9D, 423C, 803C, ----1510E, 35511, 35517, 35518, 35524, 35525, 36389 to 36393, 50134E, two each 1115F, 1177J, 1520J, 56814 and three wood screws 1-1/4 in. No. 10.... 36395 Tucker (long arm) complete, Nos. 35528, ----36388, 36394 and two 402J..... 52031 21839 Feed Dog, for shirt work, 19 teeth (22 teeth to the inch) for 52032 and 52033..... Presser Foot (wide) for 36395..... 35528 21839 40322 21839 (narrow) for 36395.....

TUCKERS (Long Arm)

1. August 1995

NUMERICAL LIST OF PARTS

No.	Plate	Name
9D	5885	Tucker (long arm) Tuck Guide Bracket
		Spring Screw, for 36394
24J	21853	Hemmers Hinge Screw, for 121679
76D	22230	Lifting Lever Connecting Rod Joint Hinge
		Screw, for 52029, 52030 and 52038
116E	21836	Arm Screw (back)
144D	22218	* Shaft (horizontal) Screw
152F	2834	Bobbin Winder Stop Latch Finger Screw, for 60456
157J	22220	Feed Lifting Rock Shaft Crank Clamping Screw, for 52265
157 J	22220	Feed Rock Shaft Crank Clamping Screw, for 29633
158J	22218	Arm Top Cover Screw
158E	22218	Bed Frame Cushion Screw, for 24108
158 J	22218	Bobbin Winder Tension Bracket Screw
171J	21843	" " Filley Set Screw, for 41585
176J	22220	Face Plate Screw
176J	22220	Presser Foot Screw
178E	22230	Bell Crank Bracket Screw, for 52029,52030
		and 52038
185H	21843	Bobbin Winder Stop Latch Tripping Arm
	•	Clamping Screw, for 41588
196J	21844	Finger Guard Holder Set Screw, for 36820.
200 F	2834	Bobbin Winder Pulley Set Screw, for 41342.
207J	2834	" Frame Spring Screw, for
207E	2834	60456 Needle Bar Connecting Stud Clamping Screw
607E	2004	for 24041
208E	22230	Thread Unwinder Thread Guide Rod Screw,
		for 225324
219J	22218	Arm Shaft (horizontal) Ball Bearing
200		(back) Cover Screw, for 95-100 Machine
219J	22218	Arm Side Cap Screw
223C	5936	Slack Thread Regulator Set Screw, for
		52338
226J	22220	Face Plate Thread Guard (lower) Screw, for 52052
226J	22220	Face Plate Thread Guard (upper) Screw, for 52052
233J	21817	Presser Foot Guide Set Screw, for 36714
236J	21844	Finger Guard Screw, for 121562
240B	22228	Ruffler Ribbon Guide Screw, for 121123
287J	5885	Tucker (long arm) Space Guide Thumb Screw
		for 36388

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

8577

Needles in Containers marked <u>"For Singer Machines"</u> are <u>not</u> Singer made needles.

2

33

34

NUMERICAL LIST OF PARTS

No.	Plate	Name
3070	5885	Tucker (long arm) Tuck Guide Bracket
		Screw Center, for 56814
3130	22220	Feed Bar Screw Center, for 56813
337B	21848	Hemmer Scroll (lower) Spring Position
0070		Screw, for 121665 and 121669
337J	21848	Presser Foot Edge Guide Screw, for 121647.
356C	22230	Rock Shaft Knee Arm Hub Set Screw, for
3300	66600	2766
75.00	22230	Rock Shaft Knee Plate Set Screw, for 2767
3560	22230	" " Lifting Arm Set Screw, for 2769
3560		" " Bracket Hook Set Screw
356C	22230	for 6337
		Rock Shaft Lifting Bracket Set Screw, for
3560	22230	6337
		Rock Shaft Stop Dog Set Screw, for 2770
-356C	22230	ROCK Shall Stop Dog Set Screw, 101 2770
362C	21844	Lifting Rod Collar Set Screw, for 2762
375C	22220	Feed Connecting Link Hinge Screw
3750	22220	* Forked Connection Hinge Screw, for
		52085
3750	22220	Feed Lifting Rock Shaft Connecting Rod
		Hinge Screw
401E	21842	Arm Shaft (horizontal) Ball Bearing
		(front) Cover Screw, for 52214
402J	5885	Tucker (long arm) Space Guide Base Screw,
		for 36395 and 36670
418E	2834	Bobbin Winder Tension Screw Stud, for
		27308
423C	22218	Arm Shaft (horizontal) Intermediate Bush-
		ing Set Screw
423C	22218	Tucker (long arm) Tuck Guide Bracket Stop
		Screw, for 36394
4320	22218	Arm Shaft (upright) Bushing (lower) Set
		Screw
435C	22218	Arm Shaft (horizontal) Flanged Bushing
		(front) Set Screw
435C	22218	Thread Take-up Lever Link Hinge Pin Set
		Screw
4430	22218	Arm Shaft (upright) Bushing (upper) Set
		Screw
446C	21842	Arm Shaft (horizontal) Ball Bearing
		(back) Locking Pin Cone Screw, for
		95-100 Machine
448C	22218	Arm Shaft (horizontal) Flanged Bushing
		(back) Set Screw
448C	22218	Balance Wheel Set Screw, for 52176
448C	22218	Feed and Feed Lifting Eccentric Set Screw
		for 52218
448C	22218	Lifting Lever Pin Set Screw, for 16510
448C		Thread Take-up Spring Regulator Set Screw

NUMERICAL LIST OF PARTS

Section of a subject of

35

.

. .

		10
No.	Plate	Name
453C	5936	Presser Bar Guide Bracket Set Screw, for 52338
457C	21843	Bobbin Winder Frame Hinge Pin Set Screw, for 41583
457C	218 43	Bobbin Winder Stop Latch Hinge Stud Set Screw, for 41913
4000	21843	Bobbin Winder Tension Stud Set Screw, for
460C		150459
560B	21844	Ruffler Driving Lever Adjusting Thumb Screw (upper) for 121121
590J	21844	Hemmer Adjusting Screw, for 35540
591F	22224	Rotating Hook Bobbin Case Tension Regu-
		lating Screw, for 52236
5 92E	22224	Rotating Hook Bobbin Case Latch Stop Screw, for 52237
6240	22224	Thread Retainer Set Screw
665J	21817	Presser Foot Spring Guide Screw, for 36465
688W	21840	Pressure Regulating Thumb Screw
689C	5936	Presser Bar Lifter Hinge Screw
691F	21839	Throat Plate Screw
704J	22224	Rotating Hook Bobbin Case Holder Position
		Bracket Screw
725J	22220	Bed Slide Spring Screw, for 12432
766D	22230	Lifting Lever Link Hinge Screw, for 52029 52030 and 52038
775E	21840	Needle Bar Connecting Link Cap Screw, for 52270
802D	22230	Lifting Lever Hinge Screw, for 52029,
80 3C	5885	52030 and 52038 Tucker (long arm) Tuck Guide Frame Stop
		Screw, for 36394
818D	21840	Feed Regulator Thumb Screw, for 52093
857H	21840	Needle Set Screw, for 52155
868E	21836	Arm Screw (front)
880E	21843	Bobbin Winder Screw, for 41915
966E	22220	Feed Lifting Rock Shaft Connecting Rod Cap Set Screw, for 127156
970D	21843	Bed Frame Thumb Screw, for 24108
1036C	22218	Arm Shaft (horizontal) Bevel Gear Set
		Screw, for 127072
10360	22218	Thread Take-up Crank Set Screw, for 52246 and 52247
10370	21842	Thread Take-up Crank Position Screw, for 52246 and 52247
1053E	22224	Rotating Hook Thread Guard Screw, for 127096
1065C	21840	Needle Bar Crank Position Screw,for 52246
		and 52247
1115F	5885	Tucker (long arm) Tuck Guide Screw, for 36394
		00074

à

이 같은 영화 영화

NACTOR PROVIDE A CONTRACTOR CONTRACTOR

.

.

া চলা য

NUMERICAL LIST OF PARTS

		· · ·
NO.	Plate	Name
1128E	21840	Feed Regulator Hinge Screw
1133E	21840	Needle Bar Bushing (lower) Set Screw
1133E	21840	" " (upper) Set Screw
1148C	22224	Rotating Hook Shaft Bushing (back) Set Screw
11480	22224	Rotating Hook Shaft Bushing (front) Set Screw
1177J	5885	Tucker (long arm) Tuck Guide Arm Screw, for 36394
1253C	22224	Rotating Hook Set Screw, for 127095
1259C	22218	Arm Shaft (upright) Bevel Gear (lower)
10000		Set Screw, for 52281
1259C	22218	Arm Shaft (upright) Bevel Gear (upper)
10000	NENIQ	Set Screw, for 52282
· 1259C	22218	Rotating Hook Shaft Bevel Gear Set Screw,
10000	00010	for 127073
12990	22220	Feed and Feed Lifting Eccentric Position
10000	40000	Screw, for 52218
1367E	22224	Rotating Hook Section Screw, for 127097
200.0		and 127239
1380E	22224	Rotating Hock Bobbin Case Tension Spring
20000		Screw, for 52236
1426E	5885	Tucker (long arm) Space Guide Stop (left)
		Screw Stud, for 35510
1426E	5885	Tucker (long arm) Space Guide Stop
		(right) Screw Stud, for 35510
1429D	2834	Bobbin Winder Frame Hinge Screw, for 60456
1430D	2834	" Stop Latch Hinge Screw, for
		60456
1 43 0D	28 34	Bobbin Winder Stop Latch Lever Hinge Screw, for 60456
14438	21844	Hemmer Screw, for 35540
1443J	21844	Piping Attachment Screw, for 35245
1499J	21853	Hemmer Screw, for 121674 and 121677
1510E	5885	Tucker (long arm) Tuck Guide Frame Spring
		Nut, for 36394
1513J	5885	Feed Lifting Rock Shaft Screw Center Nut,
		for 52097
1513J	5885	Feed Rock Shaft Screw Center Nut, for
		52097
151 3J	5885	Tucker (long arm) Tuck Guide Bracket
	~	Screw Center Nut, for 56814
1518J	22220	Feed Connecting Link Hinge Screw Nut
1518J	22220	" Forked Connection Hinge Screw Nut,
		for 52085
1518J	22220	Feed Lifting Rock Shaft Connecting Rod
		Hinge Screw Nut
1519J		Feed Bar Screw Center Nut, for 56813
1520J	5936	Presser Bar Lifter Hinge Screw Nut

NUMERICAL LIST OF PARTS

N7-	D]	Nате
No.	Plate	Tucker (long arm) Tuck Guide Bracket Stop
1520J	5936	Screw Nut, for 36394
1520J	5936	Tucker (long arm) Tuck Guide Frame Stop
10000	0000	Screw Nut, for 36394
1521J	22230	Lifting Lever Connecting Rod Lock Nut, for
		52029, 52030 and 52038
1550H	2834	Bobbin Winder Stop Latch Hinge Screw Nut,
		for 60456
15600	22224	Tension Regulating Thumb Nut, for 52098
1562J	2834	Bobbin Winder Tension Regulating Thumb
		Nut, for 27308
1657D	5885	Tucker (long arm) Space Guide Stop (left)
		Thumb Nut, for 36388
1657D	5885	Tucker (long arm) Space Guide Stop
		(right) Thumb Nut, for 36388
1700J	22228	Ruffler Driving Lever Hinge Screw Nut, for
		121123
1772J	22228	Ruffler Ruffling Blade Holder Hinge Screw
1001	03.044	Nut, for 121123
1981	21844	Ruffler Roller, for 121451 Bobbin Winder Tension Disc, for 225462
2102 2102	3471 3471	Tension Disc, for 52092
2102	2834	Bobbin Winder Tension Thread Guide, for
2100		27308
2455	2834	Bobbin Winder Tension Disc, for 27308 and
		150460
2759	5877	Lifting Rod with 2761, for 2760
2760		Lifting Rod complete for 19168, Nos. 2759
2761	21844	and 2762 Lifting Rod Cap (washer) for 2759
2762	21844	" " Collar with 362C, for 2760
2763	5877	Rock Shaft, for 2777
2763	5876	" " 4880 and 19168
2765	5877	" " Knee Arm, for 2768
2766	5877	" " " Hub with 356C, for
		2768 and 6336
2767	5877	Rock Shaft Knee Plate with 356C, for 2768
		and 6336
2768		Rock Shaft Knee Arm complete for 2777,
		Nos. 2765 to 2767
2769	5877	Rock Shaft Lifting Arm with 356C, for
		19168
2770	5876	Rock Shaft Stop Dog with 356C, for 2777,
0000	6000	4880 and 19168
2777	5877	Rock Shaft complete for 52030, Nos. 2763,
0770	E000	2768, 2770, 2778, 6337 and two 12242. Rock Shaft Lifting Bracket Hook,for 2777.
2778 2974	5877 22224	Rotating Hook Bobbin Case Latch Lever
ra (4	66664	Fulcrum Pin, for 40393

36

BF 27

~

37

•____

,

NUMERICAL LIST OF PARTS

The second second

J.

÷.

I and the

No.	Plate	Name
2975	21840	Rotating Hook Bobbin Case Latch Spring,
		for 52237
3146	21843	Binder Thumb Screw Washer, for 121168
4307	22220	Bed Slide Spring, for 12432
4879	21844	Chain Connecting Link, for 4885
4880	5876	Rock Shaft complete for 52029, Nos. 2763,
		2770, 7125, 12243 and two each 6337
		and 12242
4881	5876	Treadle, for 4885
4882	22230	" Shaft, for 4885
4883	22230	" Spring, for 4885
4884	5876	" Stand, for 4885
4885	5876	Treadle complete for 52029, Nos. 4879,
		4881 to 4884 and two wood screws 1
		in. No. 16
5596	22226	Bell Crank, for 56848
5598	22226	Bell Crank complete for 52029, 52030 and
		52038, Nos. 5735 and 56848
5599	22226	Bell Crank Bracket, for 56848
5601	22230	" Hinge Pin, for 56848
5670		Chain, length 26 in. to 35 in. with 56864
		and 56865, for 52029
5735	21844	Bell Crank Spring, for 5598
6267		Hemmer Folder, for 36122
6335	5877	Rock Shaft Knee Arm, for 6336
6336	••	Rock Shaft Knee Arm complete for 19168,
		Nos. 2766, 2767 and 6335
6337	5877	Rock Shaft Lifting Bracket with two 356C,
		for 2777
6337	5876	Rock Shaft Lifting Bracket with two 356C,
		for 4880
7125	5876	Rock Shaft Lifting Bracket Hook, for 4880.
7298	21847	Presser Foot Hinge Pin, for 120144 and
		121660
7958	21843	Bobbin Winder Stop Latch Stop Pin, for
	5030	60845
8879	5936	Arm Spool Pin Washer (cloth) Bobbin Winder Tension Bracket Spool Pin
8879	5936	Washer (cloth)
8879	5936	Tape Reel Washer (cloth) for 121412
8908	21835	Wrench, for 1519 and 1520 (Accessories)
8908	21835	" " 1513 and 1518 (Accessories)
9261	21843	Bed Frame Hinge Connection Pin, for 24108.
9261	2834	Bobbin Winder Washer, for 41347
10141	2834	" " Tension Spring, for 27308
11170	5936	Presser Bar Spring Washer
11204	21842	Thread Take-up Lever Link Hinge Pin, for
11004	01010	52269
11241	2833	Bobbin Winder Spool Washer (cloth) for
		27308
	$\sigma_{\rm eff} = 0.5$	

٠

NUMERICAL LIST OF PARTS

1		
No.	Plate	Name
11656	21819	Tape Reel Arm Steady Pin, for 121412
12240	22230	Lifting Lever Pin, for 52029, 52030 and 52038
12241	5936	Lifting Lever Link, for 52029, 52030 and 52038
12242	5876	Rock Shaft Hanger with two wood screws 1 in. No. 10, for 2777, 4880 and 19168.
12243	5876	Rock Shaft Lifting Bracket Hook, for 4880
12327	5936	Presser Bar Lifting and Releasing Lever Bracket
12329	5936	Tension Releasing Lever Spring
12361	21843	Machine Hinge Connection, for 44140
12391	21841	Presser Bar (hollow)
12398	5936	Tension Releasing Lever Hinge Pin
12416	5936	Lifting Lever Connecting Rod Joint, for 52029, 52030 and 52038
12431		Bed Slide, for 12432
12432	21806	Bed Slide complete, Nos. 4307, 12431 and two 725J
13710	21842	Tension Spring, for 52092
*15404	21042	Trade Mark, for 52252 and 52253
*15404 15405		" " Rivet, for 52252 and 52253
16510	21838	Lifting Lever with 448C, for 52029, 52030
		and 52038
16532	21836	Arm Dowel Pin
17718	5885	Tucker (long arm) Space Guide Stop (left) Thumb Nut Washer, for 36388
17718	5885	Tucker (long arm) Space Guide Stop (right) Thumb Nut Washer, for 36388
19 16 8	*****	Rock Shaft complete for 52038, Nos. 2760, 2763, 2769, 6336 and two each 2770 and 12242
19223 19335		Presser Foot Shank, for 121660
20022	21843	Machine Cushion (felt) Accessories
20022	5882	Throat Plate, for 20163 and 35540
20123	5882	Feed Dog, for 1/16 in. stitch, 16 teeth
20105	2006	(16 teeth to the inch) for 20123 and 35540
20164	21845	Feed Dog, 16 teeth (16 teeth to the inch) for 1/8 in. stitch (1/64 in. higher) for 52190, for Collar and Cuff Work
24037	21838	Feed Forked Connection, for 52085
24041	21840	Needle Bar Connecting Stud with 207E, for 127232
24079	5877	Drip Pan
24106	21843	Bed Frame Cushion (felt) for 24108
24107	21843	 Hings Connection, for 24108

39

,

القبار بالمركب الماري المراجع

COMPLET NEE

× 3

1

1

.

1

.

NUMERICAL LIST OF PARTS

No	Plate	Name
24108	5876	Bed Frame complete, Nos. 970D, two each
24100	5670	9261, 24107, four each 158E,24106 and
		six wood screws 1-1/4 in. No. 12
24544		Presser Foot Plate, for 24983
24982		" " Shank, for 24983
24983	21839	Presser Foot (spring hinged) complete,
		Nos. 24544, 24982, 26231 and 62527
25446	21843	Bobbin Winder Screw Washer, for 41915
25878	21841	Guide
+25888		Hemmer Tongue, for 36122
26026	21835	Screw Driver (large) Accessories
26231	21839	Presser Foot Spring, for 24983
26485	21835	Screw Driver (small) Accessories
26603	21847	Feed Dog, 20 teeth (16 teeth to the inch) for 26605, 26606 and 35236
26605	21847	Throat Plate, large needle hole, for 26603
26606		" " small needle hole, for 26603
27306	2834	Bobbin Winder Spool Pin, for 27308
27307	2833	" " " Stand, for 27308
27308	2833	Bobbin Winder Spool Stand complete for
		41348, Nos. 418E, 1562J, 2106, 10141,
		11241, 27306, 27307 and two each 2455
		and wood screws 1 in. No. 10
27739	7234	Thread Unwinder Thread Cone (wood) for
		large cones, for 225258
27878	21843	Machine Cushion Rivet (Accessories)
28627	21852	Hemmer on Shank, for 1/8 in. to 5/8 in.
		gauges, for 28628
28628	21852	Presser Foot, for 3/8 in. to 5/8 in.
		gauges, for 28627
29633	21840	Feed Rock Shaft Crank with 157J, for 52069
32572	21842	Tension Releasing Disc, for 52092
32574	21842	" Pin, for 52092
34105	218 34	Bobbin Winder Frame Hinge Pin, for 60845.
35063	21854	Presser Foot
35208	1971	Binder on Shank, to turn in both edges,
	· .	for bias or straight binding, for
		skirts, wrappers, shirt waists, etc
35236	1971	Hemmer on Shank, for 7/16 in. hem
35245	21817	Piping Attachment complete, for piping house dresses, Nos. 1443J and 120977.
35510	5884	Tucker (long arm) Space Guide Base with 35512, 35514 and two 1426E,for 36388.
35511	5 885	Tucker (long arm) Space Guide Indicator, for 36388
35511	5885	Tucker (long arm) Tuck Guide Indicator,
00011	0000	for 36394
35512	5885	Tucker (long arm) Space Guide Pin, for
00010		35510

NUMERICAL LIST OF PARTS

41

NO.	Plate	Name
35513	5885	Tucker (long arm) Space Guide Stop (left) for 36388
35514	5885	Tucker (long arm) Space Guide Stop (left) Guide Pin, for 35510
35515	5885	Tucker (long arm) Space Guide Stop (right) for 36388
35517	5883	Tucker (long arm) Tuck Guide Arm, for 36394
35518	5883	Tucker (long arm) Tuck Guide Base, for 36394
35522	21853	Hemmer Throw-out Arm Pin, for 121673 and 121676
35524	5885	Tucker (long arm) Tuck Guide Frame Spring Washer, for 36394
35525	5883	Tucker (long arm) Tuck Guide Plate, for 36394
35528	21839	Presser Foot (wide) for 36395
35540	5882	Hemmer on Shank complete, with right hand
•		lower guide, for lace, Nos. 1443B, 35926, 35927 and two 590J
35682	21817	Hemmer (foot) 1/8 in. hem, with guide on bottom to the right of needle hole
35710		Hemmer (foot) 3/32 in. hem, with guide on bottom to the right of needle hole
35926		Hemmer, for 35540
35927		" Shank, for 35540
35997		" (foot) 3/16 in. hem, with guide on bottom to the right of needle hole
36 072		Hemmer (foot) 1/4 in. hem, with guide on bottom to the right of needle hole
36122		Hemmer (foot) for 7/32 in. hem
36309		" " 7/32 in. hem, with guide on
		bottom to the right of needle hole
36387	5884	Tucker (long arm) Space Guide, for 36388.
36388		Tucker (long arm) Space Guide complete
		for 36395 and 36670, Nos. 287J, 35510 35511, 35513, 35515, 36387 and two each 1657D and 17718
36389	58 83	Tucker (long arm) Tuck Guide Bracket, for 36394
3639 0	5885	Tucker (long arm) Tuck Guide Bracket Spring, for 36394
36391	5884	Tucker (long arm) Tuck Guide Bracket Spring Plate, for 36394
36392	5883	Tucker (long arm) Tuck Guide Frame, for 36394
36393	5885	Tucker (long arm) Tuck Guide Frame Spring for 36394

40

See.

,

.

ţ

NUMERICAL LIST OF PARTS

BRANCE - COLORED

42

		Name
No.	Plate	Tucker (long arm) Tuck Guide complete for
36394		36395 and 36670, Nos. 9D, 423C, 803C,
		1510E, 35511, 35517, 35518, 35524,
		1510E, 35511, 35517, 35510, 3000E,
	-	35525, 36389 to 36393, 50134E, two
		each 1115F, 1177J, 1520J, 56814 and
		three wood screws 1-1/4 in. No. 10
36395		Tucker (long arm) complete, Nos. 35528,
		36388, 36394 and two 402J
36413		Hemmer (foot) plain bottom, 1/16 in. hem. 3/32 in. hem.
36414		" " " 3/32 III. Hem.
36416		
36464	21817	Presser Foot Spring Guide, for 36465
36465	21817	" " (right hand spring guide)
		with 665J and 36464, for 1/32 in. to
1		5/16 in. gauges
36480		Hemmer (foot) plain bottom, 5/32 in. hem.
36524		" " 5/32 in. hem, with guide on
		bottom to the right of needle hole
36574	22228	Presser Foot, for 36575
36575		" " 36574 with 36576 and two
		50202J
36576	22228	Presser Foot Finger Guard, for 36575
36637	22228	Ruffler Frame Spring Plate, for 121123
36638	22228	" Ribbon Guide, for 121123
36641	22228	" Ruffling Blade Holder Guide, for
		121123
36642	22228	Ruffler Ruffling Blade Holder Guide Rivet
		for 121123
36644	22228	Ruffler Separating Blade, for 121501
36644	22228	" Shirring Blade, for 120819
36646	22228	" Separating Blade Holder Friction
		Spring, for 121123
36647	22228	Ruffler Separating Blade Holder Hinge
		Stud, for 121123
36648	22228	Ruffler Separating Blade Holder Stop Stud
		for 121123
36654	21839	Presser Foot, for tucking shirt bosoms,
		for 36670
36670		Tucker (long arm) complete, for tango
		tucking, Nos. 36388, 36394, 36654 and
		two 402J
36696	21854	Hemmer Scroll (lower) Spring Lock Pin, for
		121665 and 121669
36714		Presser Foot with 233J, for 36717
36715	21817	" Guide (right) with 36716, for
		36717
36716	21817	Presser Foot Guide Stud, for 36715
36717		Presser Foot complete with Adjustable
		Guide (right) Nos. 36714 and 36715

NUMERICAL LIST OF PARTS

No.	Plate	Name
36773	21 819	Presser Foot, for braiding
36819	21844	Finger Guard Friction Washer, for 121327.
36820	21844	" " Holder with 196J, for 121327
39026	21853	Hemmer Hinge Screw Washer, for 121679
40264	21840	Rotating Hook Bobbin
40274	22224	* Section, for 127097 and
		127239
40316		Presser Foot Plate, for 40318
40317		" " Shank, for 40318
40318	5882	Presser Foot (hinged) complete, for lace
	0000	running, for 35540, Nos. 40316, 40317
		and 62527
40322	21839	Presser Foot (narrow) for 36395
40392	21840	Rotating Hook Bobbin Case Latch, for 40393
40393		" " Hinge, Nos.2974
10000		40392 and 125320, for 52237
40394	21840	Rotating Hook Bobbin Case Tension Spring,
40004	DIOI0	for 52236
41339	2833	Bobbin Winder Base, for 60456
41340	2833	" " Frame, for 60456
41341	2833	" " " Spring, for 60456
41342	2833	" " Pulley with 200F, for 60456
41343	2834	" " Spindle, for 60456
41344	2834	" " Stop Latch, for 60456
41345	2834	" " " Finger, for 60456
41346	2834	" " " Lever, for 60456
41347	2833	" " Lever, for 60456 " Nos, 60456 and two each
TUT!	2000	9331 and wood screws 1 in. No. 10
	•	R.H., for 41348
41348		
41040		Bobbin Winder (swinging automatic, right
41400	22226	hand) complete, Nos. 27308 and 41347.
41400		Machine Rest Pin (wood) Accessories
41585	218 34 218 34	Bobbin Winder Frame with 457C, for 60845.
41586	21654 218 34	1 ulitoj wieli 1/10, 101 00040
41587	21834	bpindie, 101 000+0
41588	21834	Stop Laten, 101 00845
#1000	£1004	TTIPPING RIM
41593	5936	with 185H, for 60845
41594	5936	Bobbin Winder Tension Spring, for 150460.
41594 41595	5936	BCUU, 101 130400
41999	2900	miead Guard, 10r
41913	21834	150460.
41913 41914	218 34 218 34	Bobbin Winder Bracket with 457C, for 60845
41914 41915	21834	France opring, 101 000+5
#7910	\$1004	60645 WITH 880E and 25446,
42367	21836	for 150461
70007	ST090	Arm 011 Tube Packing (braided cotton) for
42614	21843	52185 and 127187
44014	21040	Bobbin Winder Stop Latch Hinge Stud, for
		60845

43

-

.

251025

ST ASSESSMENTS

*

--

. .

NUMERICAL LIST OF PARTS

44		NUMERICAL LIST OF PARTS
No.	Plate	Name
43525	21854	Binder Steady Pin, for 121398
43525	21854	Hemmer Scroll (lower) Spring Position Pin for 121667
43944	5936	Tension Releasing Lever
44139	21843	Machine Hinge Plate, for 44140
44140		Machine Hinge complete, Nos. 12361, 44139
		and merlized wood screw 1-1/4 in. No.
		14 (Accessories)
44253	22228	Feed Dog, 16 teeth (16 teeth to the inch) for 44255 and 44256
44255		Throat Plate, small needle hole, for 44253
44256	22228	* * large needle hole, for 44253
5005 3 W	22218	Arm Side Cover Thumb Screw
50083C	22220	Feed Connecting Link Hinge Stud Set Screw for 52074
50117E	22220	Feed Dog Screw
501 34E	5885	Tucker (long arm) Tuck Guide Base Screw Stud, for 36394
50190W	22220	Face Plate Thumb Screw
50190W	22220	Guide Thumb Screw
501910	22220	Feed Lifting Rock Shaft Screw Center, for 52097
501010	22220	Feed Rock Shaft Screw Center, for 52097
50191C 50202J	22228	Presser Foot Finger Guard Screw, for 36575
50202J	218 44	Finger Guard Holder Set Screw, for 120858
503020 50304C	21842	Tension Stud, for 52098
503050	22224	* * Set Screw, for 52083
50316J	21844	Finger Guard Screw, for 121327
51068R	22218	Arm Shaft (horizontal) Bevel Gear Case Screw, for 142003
51068R	22218	Rotating Hook Shaft Bevel Gear Case Screw for 142004
51097J	21843	Binder Thumb Screw, for 121168
51097J	21843	Tape Reel Arm Thumb Screw, for 121168
510375 51219F	21844	Ruffler Driving Lever Hinge Screw, for
91219F	C1044	121123
51221 F	22228	
512720	21844	Ruffler Rolle: Stud and Needle Clamping Screw, for 121451
5 13 71K	21844	Ruffler Driving Lever Adjusting Thumb Screw (lower) for 121121
50014	01041	Needle Bar Bushing (upper)
52014 52016	21841 5936	Presser Bar Lifter
52016 52018	22224	Rotating Hook Bobbin Case Holder Position
		Bracket
52022	21842	Thread Take-up Lever with 52130, for 52025
52023	21842	Hinge Pin, for 52025
52024	21842	Link, for 52025

No.	Plate	Name
52025	•	Thread Take-up Lever complete for 52269,
		Nos. 52022 to 52024
52027	21842	Thread Guard (side of arm)
52028	22226	Lifting Lever Connecting Rod, for 52029, 52030 and 52038
52029		Foot Lifter complete, Nos. 76D, 766D,802D 1521J, 4880, 4885, 5598, 5670, 12240, 12241, 12416, 16510, 52028 and two 178E.
52030		<pre>Knee Lifter complete (power table) Nos. 76D, 766D, 802D, 1521J, 2777, 5598, 12240, 12241, 12416, 16510, 52028 and two 178E.</pre>
52031	21853	Feed Dog, 19 teeth (22 teeth to the inch) for 52032 and 52033
52032	21853	Throat Plate, large needle hole, for 52031
52033	21839	" " swall needle hole, for 52031
52038		Knee Lifter complete (bench stand) Nos. 76D, 766D, 802D, 1521J, 5598, 12240, 12241, 12416, 16510, 19168, 52028 and two 178E
52045	21836	011 Tube Packing (wick) for 127133
52051	22226	Face Plate, for 52052
52052		Face Plate complete, Nos. 52051, 52053, 52170 and two 226J
52053	22220	Face Plate Thread Guard (lower) for 52052
52055	21819	Presser Foot, for 35208 and 35236
52056	21817 .	Presser Foot.
52065	21838	Feed Lifting Rock Shaft, for 52264
52068	21838	Rock Shaft, for 52069
52069		Feed Rock Shaft complete, Nos. 29633 and 52068
52073	22220	Feed Connecting Link Hinge Stud, for 52118
52074 .	21837	Regulator with 50083C, for 52118
52082	21842	Thread Take-up Spring, for 52092
52083	21842	" " Regulator with
52085		50305C, for 52092 Feed Forked Connection 24037 with 375C.
52092		1518J and 52165 Tension complete, Nos. 13710, 32572,32574 52082, 52083, 52098 and two 2102
52093		Feed Regulator 52118 with 818D
52097		* Lifting Rock Shaft Screw Center 50191C with 1513J
52097		Feed Rock Shaft Screw Center 50191C with 1513J
52098		Tension Stud 50304C with 1560C, for 52092
52118		Feed Regulator 52074 with 52073, for 52093
52130	21842	Thread Take-up Lever Thread Eyelet Bush-
		ing, for 52022

Transfer Accession

•

÷

NUMERICAL LIST OF PARTS

No	Plate	Name
No. 52146	21842	Arm Shaft (horizontal) Back Bearing 011
04140	21040	Cup Pad (braided cotton) for 95-100
		Machine
52146	21842	Arm Shaft (horizontal) Front Bearing Oil
•		Pad (braided cotton) for 95-100 Ma-
		chine
52155	21841	Needle Bar (hollow) with 857H
52165	22220	Feed Connecting Link, for 52085
52167	21841	011 Tube Bracket 127091 with 127133, for
		oiling 52165
52170	22220	Face Plate Thread Guard (upper) for 52052
52171	21842	Thread Eyelet, for 52268
52176	22226	Balance Wheel (power disc) 2-3/16 in.pul-
		ley with two 4480
52180	21836	Arm Oil Tube (long) with 52184, for oil-
50100	01070	ing 52022 Arm Oil Tube with 52184, for oiling
52182	21836	127231
52183	21836	Arm 011 Tube with 52184, for 011ing 52024
00100	21000	and 127156, for 127193 and 150460
52184	21836	Arm Oil Tube Packing (wick) for 52180,
		52182 and 52183
52185	21836	Arm Oil Tube (short) with 42367, for oil-
		ing 52022
52188	21846	Presser Foot (solid) for 52190, for Cuff
		Work,
52189	21845	Presser Foot (solid) for 52190, for Col- lar Work
52190	21845	Throat Plate, for 20164, for Collar and
95190	\$1040	Cuff Work
52193	22218	Arm Shaft (horizontal) Flanged Bushing
00400		(back) 011 Pad (inside) braided cot-
		ton, for 52260
52193	22218	Arm Shaft (horizontal) Flanged Bushing
		(front) Oil Pad (inside) braided cot-
		ton, for 52196
52193	22218	Arm Shaft (horizontal) Intermediate Bush-
		ing Oil Pad (inside) braided cotton,
		for 52262 Arm Shaft (horizontal) Flanged Bushing
+52195		(front) for 52196
52196	21837	Arm Shaft (horizontal) Flanged Bushing
06190	21007	(front) 52195 with 52193 and 52198,
		for 52256
52198	22218	Arm Shaft (horizontal) Flanged Bushing
. =		(front) 011 Pad (outside) felt, for
		52196
52207	21840	Needle Bar Connecting Link Lubricating
		Pad (wood) for 127231

NUMERICAL LIST OF PARTS

47

1

No.	Plate	Name
52210	22220	Feed and Feed Lifting Eccentric Lubricat-
		ing Pad (long) wood, for 52218
52211	22220	Feed and Feed Lifting Eccentric Lubricat-
		ing Pad (short) wood, for 52218
52214		Needle Bar Crank 52247 with 401E and
		127009, for 52258
52216	22224	Thread Take-up Crank, for 52270
	21837	Feed and Feed Lifting Eccentric with 4480
		1299C, 52210 and 52211, for 52231
52231		Feed and Feed Lifting Eccentric 52218 with 127152
52235		Rotating Hook Bobbin Case, for 52236
52236		" " 52235 with 591F
00000		1380E and 40394, for 52237
52237	22224	Rotating Hook Bobbin Case complete for
		127240 and 127241, Nos. 592E, 2975,
		40393 and 52236
52239	22218	Arm Spool Pin and Thread Eyelet, for
		127193
52239	22218	Bobbin Winder Tension Bracket Spool Pin
		and Thread Eyelet, for 150460
52240	21837	Arm Shaft (horizontal) Bevel Gear Case
		Holder, for 95-100 Machine
52246	21841	Needle Bar Crank with 1036C, 1037C and
	,	1065C, for 52256
52247	21841	Needle Bar Crank with 1036C, 1037C and
		1065C, for 52214
+52252		Arm with 15404 and two each 15405 and
		56015, for 95-80 Machine
•52253		Arm with 15404 and two each 15405 and
		56015, for 95-100 Machine
52254	21836	Arm Oil Tube, for oiling 52262
52255	21838	" Shaft (horizontal) for 52256
52256		" " 52255 with 52196
		and 52246, for 95-80 Machine
52257	21838	Arm Shaft (horizontal) with 127067, for
		52258
52258		Arm Shaft (horizontal) 52257 with 52214,
50050		for 95-100 Machine
+52259		Arm Shaft (horizontal) Flanged Bushing
50000	61 65 0	(back) for 52260
52260	21837	Arm Shaft (horizontal) Flanged Bushing
		(back) 52259 with 52193 and 52289, for
#60041		95-80 Machine
*52261	**	Arm Shaft (horizontal) Intermediate Bush-
52262	21837	ing, for 52262 Arm Shaft (horizontal) Intermediate Bush-
00000	51001	ing 52261 with 52193 and 52263
52263	22218	Arm Shaft (horizontal) Intermediate Bush-
00000	MODIO	ing Oil Pad (outside) felt, for 52262.
		ing oil rad (outside) leit, for 52262.

16

NUMERICAL LIST OF PARTS

No.	Plate .	. Name
52264		Feed Lifting Rock Shaft complete, Nos.
		52065 and 52265
52265	21837	Feed Lifting Rock Shaft Crank 52271 with 157J and 52267, for 52264
52266	•••••	Feed Lifting Rock Shaft Crank Slide Block for 52267
52267	22220	Feed Lifting Rock Shaft Crank Slide Block 52266 with 125060, for 52265
52268	21840	Needle Bar Bushing (lower)
52269		Thread Take-up complete, Nos. 11204,52025
		and 52270
52270		Thread Take-up Crank 52216 with 775E and 127232, for 52269
*52271		Feed Lifting Rock Shaft Crank, for 52265.
+52275		Arm Shaft (upright) Bushing (lower) for 52276
52276	21837	Arm Shaft (upright) Bushing (lower) 52275 with 52279 and 52280
+52277	•••••	Arm Shaft (upright) Bushing (upper) for 52278
52278	21837	Arm Shaft (upright) Bushing (upper) 52277 with 52279 and 52280
52279	22218	Arm Shaft (upright) Bushing Oil Wick (in-
		side) braided cotton, for 52276 and 52278
52279	22218	Rotating Hook Shaft Bushing Oil Wick (in- side) braided cotton, for 52286 and 52288
52280	22218	Arm Shaft (upright) Bushing 011 Pad (out- side) felt, for 52276 and 52278
52280	22218	Rotating Hook Shaft Bushing Oil Pad (out- side) felt, for 52286 and 52288
52281	22218	Arm Shaft (upright) Bevel Gear (lower) with two 1259C
52282	222 18	Arm Shaft (upright) Bevel Gear (upper) with two 1259C
+52283		Bed
+52285	•••••	Rotating Hook Shaft Bushing (back) for 52286
52286	21841	Rotating Hook Shaft Bushing (back) 52285 with 52279 and 52280
*52287		Rotating Hook Shaft Bushing (front) for 52288
52288	21841	Rotating Hook Shaft Bushing (front) 52287 with 52279 and 52280
52289	222 18	Arm Shaft (horizontal) Flanged Bushing (back) 011 Pad, (outside) felt, for 52260
52290	21836	ATT Oil Tube Hole Plug

NUMERICAL LIST OF PARTS

R RES T

ι (t

- 1

- 1

No.	Plate	Name
52337	5936	Slack Thread Regulator
52338	5936	Presser Bar Guide Bracket with 223C and
		453C
52452	21837	Feed Bar
52454	22224	Thread Retainer
52486	21842	Arm Shaft (horizontal) Ball Bearing
		(back) Locking Pin, for 95-100 Machine
52487	21842	Arm Shaft (horizontal) Ball Bearing
		(back) Locking Pin Cone, for 95-100
		Machine
54897	21842	Arm Shaft (horizontal) Back Bearing 044
		Cup, for 95-100 Machine
54897	21842	Arm Shaft (horizontal) Front Bearing OSA
		Cup, for 95-100 Machine
56015	21836	Arm Oil Tube, for oiling 142006, for 52252
		and 52253
56813		Feed Bar Screw Center 313C with 1519J
56814		Tucker (long arm) Tuck Guide Bracket
		Screw Center 307C with 1513J, for
		36394
56848		Bell Crank 5596 with 5599 and 5601, for
		5598
56864	21819	Chain Hook (large) for 5670
56865	21819	" (small) for 5670
60456		Bobbin Winder, Nos. 152F, 207J, 1429D,
		1550H, 41339 to 41346 and three 1430D
00045		for 41347
60845	,	Bobbin Winder, Nos. 7958, 34105, 41583,
		41585 to 41588, 41913, 41914 and
005.00	01.070	42614, for 41915
62527	21839	Presser Foot Hinge Pin, for 24983 and
0750	00010	40318
68350	22218	Arm Shaft (horizontal) Back Bearing Oil
68350	22218	Cup, for 95-80 Machine
00000	66610	Arm Shaft (horizontal) Front Bearing 011
120143		Cup, for 95-80 Machine Presser Foot Plate, for 120144
120143	21847	Presser Foot (hinged) complete, for button
120144	21041	stays on dress shirts, Nos. 7298,
		19335 and 120143
120342	21835	Oiler (copper plated) with 120343 (Acces-
INCOTE	21000	sories)
120343	21835	Oiler Spout, 3-1/2 in. long, for 120342.
120536	22226	Tape Reel Disc with 120538 and 120539, for
		121168
120537		Tape Reel Disc Fin, for 121412
120538		* * * Stud (wood) for 120536
120539		* * * Sleeve, for 120536
120803	5919	Hemmer (foot) for 1/8 in. hem

48

/ ______

بري.

-

i

متدري الارسي

. •

NUMERICAL LIST OF PARTS

51

12237

:

No.	Plate	Namo
-121168		Binder (transverse) on Shank, for 3/4 in.
		7/8 in. and 1 in. tape, Nos. 3146,
		120536, 121167, 121169, 121397,121398
	•	121412 and two 51097J
121169	21819	Presser Foot, for 121168
121326	21844	Finger Guard, for 121327
121327	21844	Finger Guard (metal) complete, Nos. 36819 36820, 50316J and 121326
121397	21818	Feed Dog, 18 teeth (16 teeth to the inch)
161091	21010	for 121168 and 121398
121398	21818	Throat Plate with 43525, for 121168 and
		121397
121412	21819	Tape Reel Arm with 8879, 11656 and 120537
		for 121168
121451		Ruffler 121123 with 1981, 51272C and
		120819
121501		Ruffler Separating Blade Holder 120830
		with 36644 and two 120829, for 121123
121507	21844	Finger Guard, for 121562 Finger Guard (wire) complete, Nos. 120858
121562	21844	121507 and two 236J
121587	21838	Grease Gun (3 oz. capacity) for Fitting
101007	21000	No. 142005 (Accessories)
121588		Grease Gun (1/2 1b. capacity) for Fitting
		No. 142005 (Accessories)
121646	21848	Feed Dog, 12 teeth (16 teeth to the inch)
		for Collar Work (second stitching)
		for 121649
121647	21848	Presser Foot with 121648 and two 337J, for
		3/16 in., 7/32 in., 9/32 in. and 5/16
		in. gauges, for Collar Work (second
101040	01040	stitching) Presser Foot Edge Guide, for 3/16 in.,
121648	21848	7/32 in , 1/4 in , 9/32 in and 5/16
		in. gauges, for 121647
121649	21848	Throat Plate, for 121646
121653	21847	Hemmer on Shank, for 9/16 in. hem, for
		button stays on dress shirts
121655	21849	Binder on Shank, for facing sleeve plack-
		ets
121656	21849	Presser Foot, for facing sleeve plackets.
121658	21851	Edge Folder with Edge Guide on Shank, for
		yoking dress shirts, for 121660
121659	01051	Presser Foot Plate, for 121660
121660	21851	Presser Foot (hinged) complete, for yok- ing dress shirts, for 121658, Nos.
		7298, 19223 and 121659
121662	21850	Joining Attachment, for shoulder joining
INTOON	~~~~~	dress shirts, for 121663
		· · · · · · · · · · · · · · · · · · ·

NUMERICAL LIST OF PARTS

No.	Plate	Name
120804	5919	Hemmer (foot) for 5/32 in. hem
120805	5919	" " " 3/16 in. hem
120806	5920	1/ - 10, 10, 10, 11, 11, 11, 11, 11, 11, 11,
120807	5920	" " 5/16 in. hem
120812	22228	Ruffler Driving Lever Bushing, for 121123
120813	22228	" " Friction Washer, for
		121123
120818		Ruffler Shirring Blade Holder, for 120819
120819		" " 120818 with
		36644 and two 120829, for 121451
120828	21839	Presser Foot (single toe) for gathering,
		for fine work
120829	22228	Ruffler Ruffling Blade Rivet, for 121120.
120829	22228	* Separating Blade Rivet, for 121501
120829	22228	 Shirring Blade Rivet, for 120819.
120830		* Separating Blade Holder, for
200000		121501
120837	5920	Hemmer (foot) plain bottom, 1/8 in. hem,
100000		slotted for lace
*120838	5919	Hemmer Tongue, for 120804 and 120805
+120839	21844	" " 120806 and 120807
*120843	5919	" " 120803 and 120938
120858	21844	Finger Guard Holder with 50302J, for
100000	N1 041	121562
120898	5921	Hemmer (foot) for 1/16 in. to 1/8 in. hem,
120030	0001	for China Silk, etc
120911	5921	Hemmer (foot) for 5/32 in. to 1/4 in.hem,
TEOSTI	0001	for China Silk, etc
120938	5921	Hemmer (foot) for 3/32 in. hem
120939	5919	" Folder, for 120803 to 120807 and
120909	0313	120938
100000		Piping Attachment, for 35245
120977		Hemmer on Shank, for 1/16 in. to 1/4 in.
120991	21852	gauges
		Ruffler Driving Lever, for 121123
121116	22229	 Frame, for 121123
121117	22229	" Ruffling Blade, for 121120
121118	22228	" " Holder, for 121120
121119	22228	" " " 121119 with
121120		101110 #101
		121118 and two 120829, for 121123
121121	22229	Ruffler Ruffling Blade Lever with 560B
		and 51371K, for 121123
121123	22229	Ruffler complete for 121451, Nos. 240B,
		1700J, 1772J, 36637, 36638, 36641,
		36642, 36646 to 36648, 51219F, 51221F
		120812, 120813, 121116, 121117,121120
		121121 and 121501
121167		Binder Folder on Shank, for 121168

155

.

NUMERICAL LIST OF PARTS

52

1		
No.	Plate	Name
121663	21850	Presser Foot, for shoulder joining dress
		shirts, for 121662
12166 5	21854	Hemmer Scroll (lower) on Shank with 337B,
		36696 and 121667, for 121668
121666	21854	Hemmer Scroll (upper) for 121668
121667	21854	" (lower) Spring with 43525;
		for 121665 and 121669
12166 8	21854	Hemmer on Shank complete, for 7/8 in. to
		2 in. hem, for hemming pillow cases,
		Nos. 121665 and 121666
121669	21854	Hemmer Scroll (lower) on Shank 337B,36696
101000		and 121667, for 121671
121670	21854	Hemmer Scroll (upper) for 121671
121671	21854	Hemmer on Shank complete, for 2-1/16 in.
		to 4 in. hem, for hemming pillow
101000		cases, Nos. 121669 and 121670
121672	21853	Hemmer on Shank, for 121674
121673	21853	Throw-out Arm with 35522, for
121674	01057	121674
1210/4	21853	Hemmer complete on Throw-out Arm, for 2
		in. or 3 in. hem, for 121679, Nos. 121672, 121673 and two 1499J
121675	21853	Hemmer on Shank, for 121677
121676	21853	" Throw-out Arm with 35522, for
		121677
121677	21853	Hemmer complete on Throw-out Arm, for 1
		in. hem, for 121679, Nos. 121675,
		121676 and two 1499J
121 67 8	21853	Hemmer Tension Spring, for 121679
121679		Hemmers complete, for 1 in. and 2 in. or
		3 in. hems, for hemming sheets, Nos.
		24J, 39026, 121674, 121677 and 121678
121680	21853	Presser Foot, for hemming sheets
+125060	·	Feed Lifting Rock Shaft Crank Slide Block
		Stud, for 52267
125320	21840	Rotating Hook Bobbin Case Latch Lever, for
		40393
127009	21841	Arm Shaft (horizontal) Ball Bearing
100011	01041	(front) Cover, for 52214
127011	21841	Arm Shaft (horizontal) Ball Bearing
127066	21841	(back) for 95-100 Machine Arm Shaft (horizontal) Ball Bearing
_ 12/000	\$10 4 1	(front) for 95-100 Machine
127067	21842	Arm Shaft (horizontal) Ball Bearing
10,001	21040	(front) Key, for 52257
127072	21837	Arm Shaft (horizontal) Bevel Gear with
		two 1036C
127073	22224	Rotating Hook Shaft Bevel Gear with two
		12590

NUMERICAL LIST OF PARTS

and it is made

No.	Plate	Name
127079	21837	Arm Side Cover
127091	21841	011 Tube Bracket, for 52167
127095	21840	Rotating Hook with three 1253C, for 127096
127096		" " 127095 with 127102 and four
		1053E, for 127097 and 127239
127097		Rotating Hook 127096 with 40274 and three
		1367E (for Agents only)
127102	22224	Rotating Hook Thread Guard, for 127096
127108	21841	Presser Bar Spring
127133	21841	011 Tube with 52045, for 52167
*127143		Arm Shaft (horizontal) Ball Bearing
		(back) Cover, for 127144
127144	21841	Arm Shaft (horizontal) Ball Bearing
		(back) Cover 127143 with 127145, for
		95-100 Machine
*12714 5		Arm Shaft (horizontal) Ball Bearing
-		(back) Cover 011 Lead, for 127144
127146	21806	Arm Side Cap
127152	21837	Feed and Feed Lifting Eccentric Sleeve,
		for 52231
127156	21838	Feed Lifting Rock Shaft Connecting Rod
127187	01070	with two 966E
12/18/	21836	Arm 011 Tube with 42367, for oiling 127152
127192	21837	for 127193 and 150460
127192	21837	Arm Top Cover, for 127193
16/130	21007	* * 127192 with 52163, 52239, 127167 and 127255
127231	21840	Needle Bar Connecting Link with 52207, for
		127232
127232		Needle Bar Connecting Link 127231 with
		24041, for 52270
+127239	·	Rotating Hook 127096 with 40274, 127242
		and three 1367E, for 127240
127240		Rotating Hook 127239 with 52237
127241	·	" " Bobbin Case 52237 with
		127242
127242	22224	Rotating Hook Bobbin Case Holder, for
		127239 and 127241
127255	22218	Arm Top Cover Positioning Disc, for 127193
127255	22218	Bobbin Winder Tension Bracket Positioning
		Plate, for 150460
140184E	21836	Arm Shaft (horizontal) Bevel Gear Case
	· · · ·	Plug Screw, for 142003
140184E	21836	Rotating Hook Shaft Bevel Gear Case Plug
140007	01070	Screw, for 142004
142003	21837	Arm Shaft (horizontal) Bevel Gear Case
		(two pieces) with 51068R, 140184E,
		and 142005

· .

-

53

1

. *** *******

.

NUMERICAL LIST OF PARTS

No.	Plate	Name
142004	21841	Rotating Hook Shaft Bevel Gear Case (two
		pieces) with 51068R, 140184E and
		142005
142005	21836	Arm Shaft (horizontal) Bevel Gear Case
		Alemite Fitting, for 142003
142005	21836	Rotating Hook Shaft Bevel Gear Case Ale-
		mite Fitting, for 142004
142006	21837	Arm Shaft (upright)
142007	21838	Rotating Hook Shaft
142008	22224	Bushing (front) 011
		Cup
150203	20335	Thread Unwinder Spool Rest Cushion (felt)
		for 225258
150459	21834	Bobbin Winder Tension Bracket with 460C,
		for 150460
150460		Bobbin Winder Tension Bracket complete,
		for 150461, Nos. 41593 to 41595,52183
		52239, 127187, 127255, 150459 and two
		2455
150461		Bobbin Winder (swinging automatic, left
		hand) complete, Nos. 41915 and 150460
200056E	3471	Bobbin Winder Stop Latch Screw, for 225382
200082D	3471	* * Tension Bracket Screw, for
		225382
20029 9H	3471	Bobbin Winder Stop Latch Trip Lever Hinge
		Screw, for 225382
2003800	3471	Bobbin Winder Pulley Set Screw, for 202473
2003830	22230	Thread Unwinder Spool Rest Rod Set Screw,
		for 202490
2010180	22230	Thread Unwinder Spool Rest Set Screw, for
		225257
201499B	3471	Bobbin Winder Tension Stud, for 225461
201572B	3471	" " " Thumb Nut, for
		225462
20169 6J	22230	Thread Unwinder Thread Guide Lock Nut, for
		225258
202277	3471	Bobbin Winder Frame Oil Packing (wick)
		for 225453
202407	3471	Bobbin Winder Tension Spring, for 225462.
202473	3470	" Pulley with 200380C, for
		225382
202478	3471	Bobbin Winder Stop Latch Trip Lever, for
		225382
202490	20335	Thread Unwinder Spool Stand with 200383C,
	*****	for 225258
225257	20335	Thread Unwinder Spool Rest with 201018C,
		for 225258

NUMERICAL LIST OF PARTS

55

and the second second

1

,

.

No.	Plate	Name
225258	20335	Thread Unwinder complete, for two spools
		or two large cones of thread, Nos.
-		201696J, 202490, 225257, 225324,
		225326, 225388, two each 150203.
		225391 and three wood screws 7/8 in.
		No. 12 F.H.
225322	22230	Thread Unwinder Thread Guide Rod Washer,
		for 225324
225324	20335	Thread Unwinder Thread Guide Rod with
		208E and 225322, for 225258
225326	20335	Thread Unwinder Thread Guide Position Cup
200000	20000	for 225258
225381	3470	Bobbin Winder Spindle, for 225382
225382	34 69	Bobbin Winder (swinging automatic, right
220002	0409	booth wheel (swinging automatic, right
		hand) complete, for power table, Nos.
		200056E, 200082D, 200299H, 202473,
		202478, 225381, 225433, 225444, 225453
		to 225456, 225458, 225462, 228026, two
		each 225459 and wood screws 3/4 in.
005800	00775	No. 12 R.H.
225388	20335	Thread Unwinder Spool Rest Rod, for 225258
225390	72 34	" Thread Cone Holder, for
~~~~~		inverted cones, for 225258
225391	20335	Thread Unwinder Thread Guide, for 225258.
225433	3469	Bobbin Winder and Tension Bracket Base,
	-	for 225382
225438	3471	Bobbin Winder Frame Oil Well Cap, for
	• _	225453
225444	3471	Bobbin Winder Stop Latch, for 225382
225453	3470	" " Frame with 202277 and
		225438, for 225382
225454	3471	Bobbin Winder Frame Hinge Pin, for 225382.
225455	3471	* * * Spring, for 225382
225456	3471	" " " Plunger, for
		225382
225458	3471	Bobbin Winder Stop Latch Thumb Lever, for
		225382
225459	3471	Bobbin Winder Stop Latch Thumb Lever
		Hinge Stud, for 225382
225459	3471	Bobbin Winder Stop Latch Thumb Lever
		Joint Stud, for 225382
225461	3471	Bobbin Winder Tension Bracket with
		201499B, for 225462
225462		Bobbin Winder Tension Bracket complete
		for 225382, Nos. 201572B, 202407,
		225461 and two 2102
228026		Bobbin Winder Tension Bracket Screw Wash-
		er, for 225382

54

**.....** 

